


KIT



A

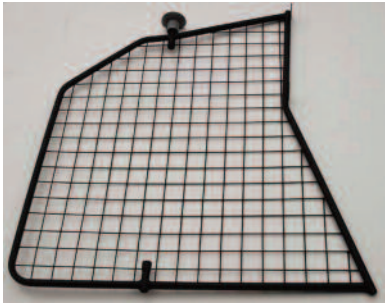

B X1



C x2



D x2








Honda CRV
G1273D

BOOT DIVIDER
FITTING INSTRUCTION

Check tightness of all
fixings periodically

tel no. 01827 713040
www.dogcages.uk.com

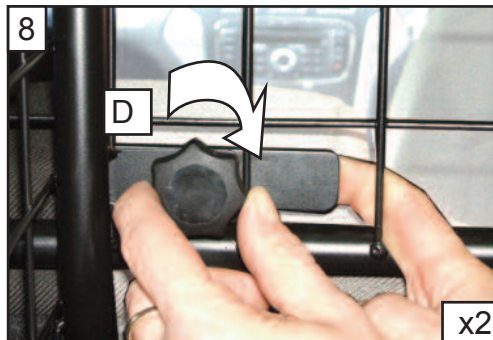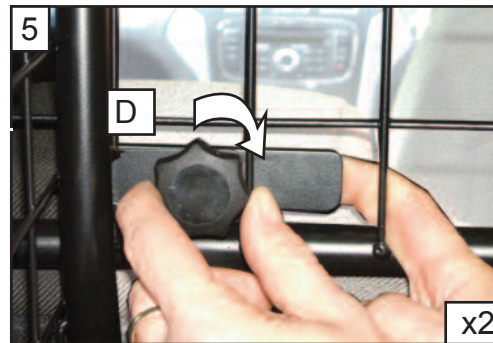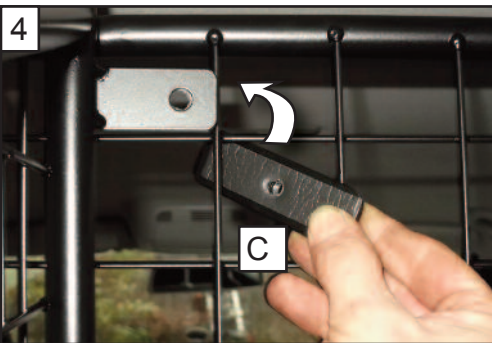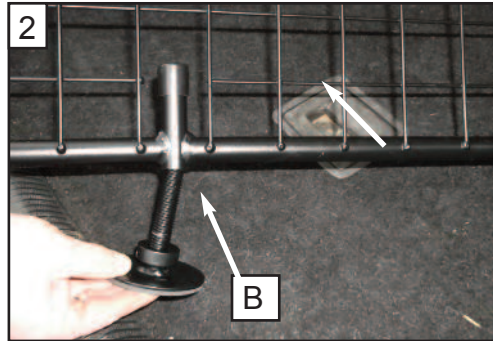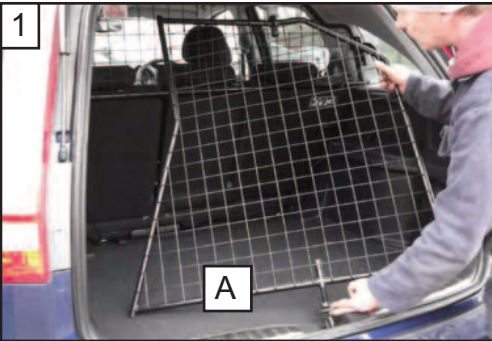


subject to alteration without notice

KIT



Bx1 L/H

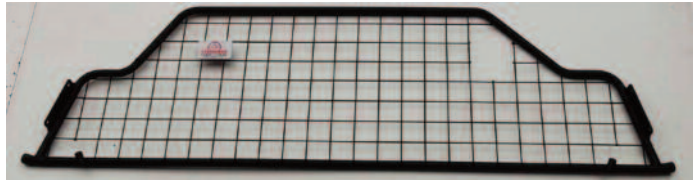

A



Bx1 R/H




C x4



D x1



E x2

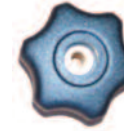

F x2



Honda CRV 2006-2012 G1273

DOG GUARD
FITTING INSTRUCTION

HUNDESCHUTZGITTER
EINBAUANLEITUNG

PROTECTION CONTRE LES CHIENS
INSTRUCTIONS DE MONTAGE

HUNDEGITTER
MONTERINGSVEJLEDNING

CONJUNTO PROTECTOR PARA
PERROS
INSTRUCCIONES DE MONTAJE

KIT BARRIERA CANI
ISTRUZIONI DI MONTAGGIO

HUNDEVERNGITTER
MONTASJEVEILEDNING

HONDENBESCHERMINGSREK
INBOUWINSTRUKTIES

SATS HUNDSKYDD
MONTERINGSANVISNING

KOIRAN TURVARISTIKKO
ASENNUSOHJEET

www.dogcages.uk.com

