


KIT

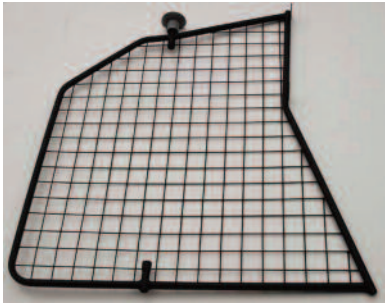

A



B X1



C x2



D x2









Honda CRV
G1273D

BOOT DIVIDER
FITTING INSTRUCTION

Check tightness of all
fixings periodically

tel no. 01827 713040
www.dogcages.uk.com

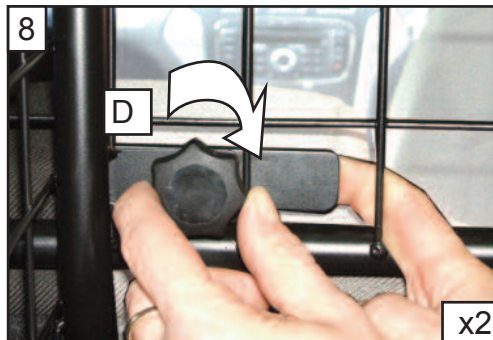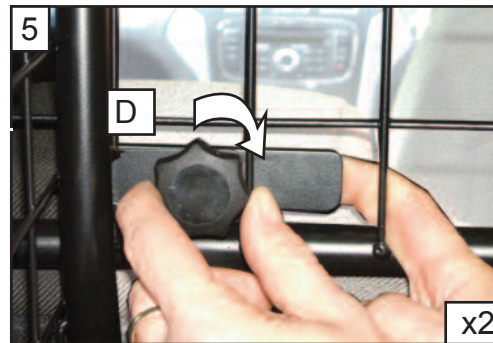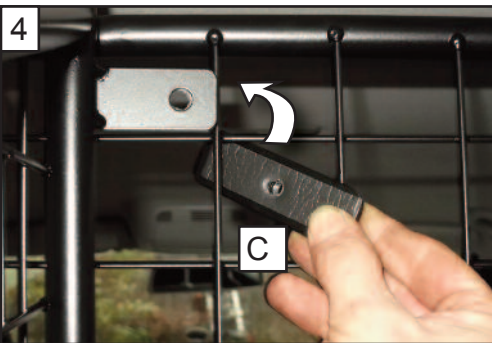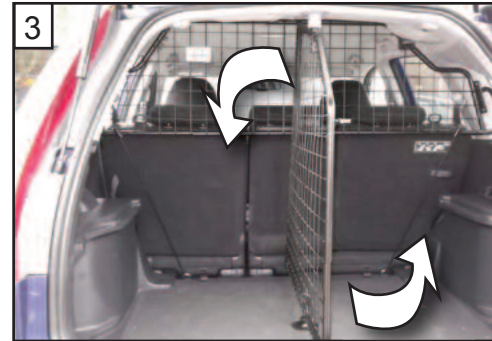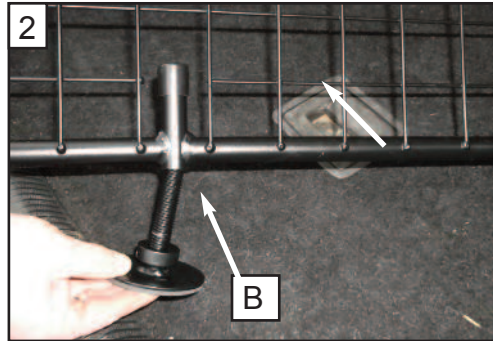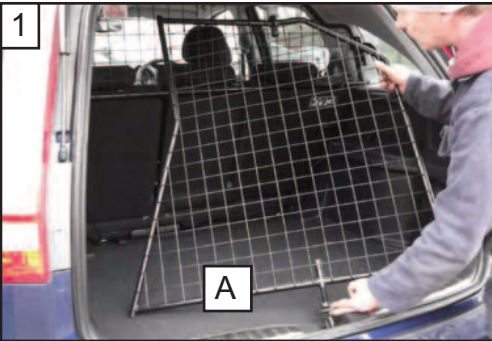

subject to alteration without notice