


KIT

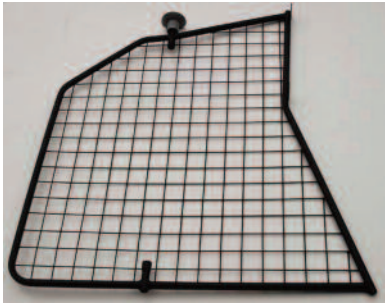

A



B X1



C x2








D x2



**Honda CRV**  
G1273D

## BOOT DIVIDER FITTING INSTRUCTION

Check tightness of all  
fixings periodically

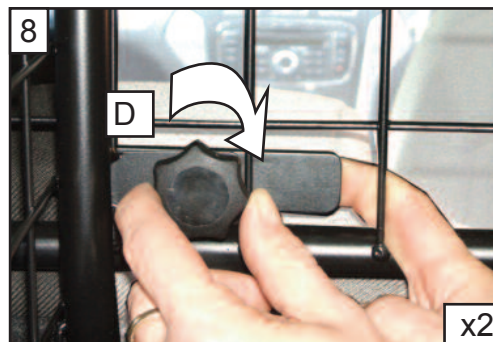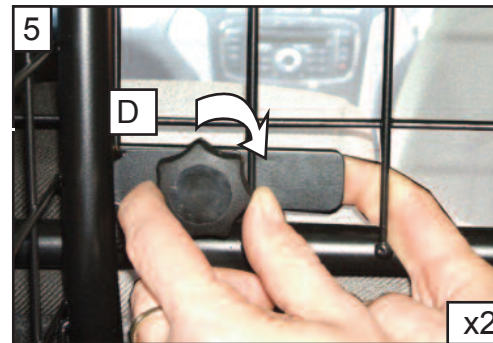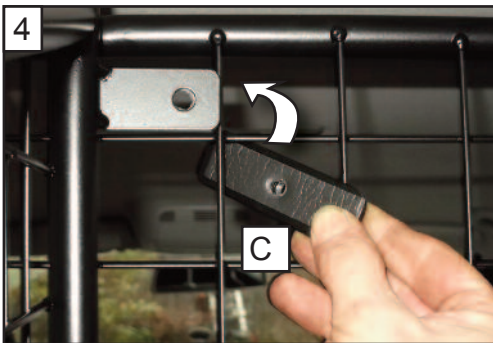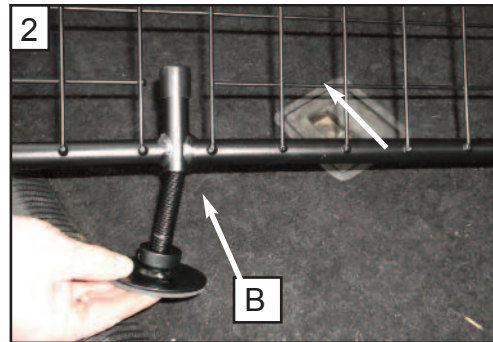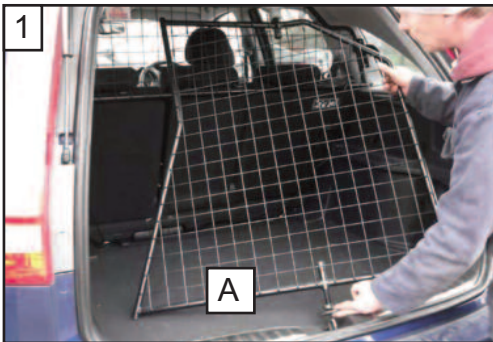

tel no. 01827 713040  
[www.dogcages.uk.com](http://www.dogcages.uk.com)


subject to alteration without notice

G1273D is1 - SEP 12

KIT



Bx1 L/H

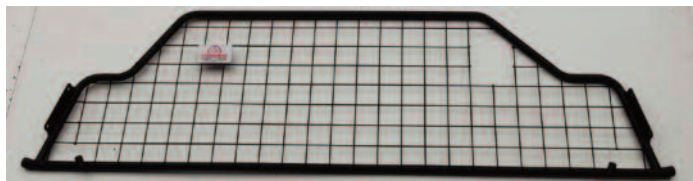

A



Bx1 R/H



C x4



D x1



E x2



F x2



## Honda CRV 2006-2012 G1273

DOG GUARD  
FITTING INSTRUCTION

HUNDESCHUTZGITTER  
EINBAUANLEITUNG

PROTECTION CONTRE LES CHIENS  
INSTRUCTIONS DE MONTAGE

HUNDEGITTER  
MONTERINGSVEJLEDNING

CONJUNTO PROTECTOR PARA  
PERROS  
INSTRUCCIONES DE MONTAJE

KIT BARRIERA CANI  
ISTRUZIONI DI MONTAGGIO





HUNDEVERNGITTER  
MONTASJEVEILEDNING

HONDENBESCHERMINGSREK  
INBOUWINSTRUCTIES

SATS HUNDSKYDD  
MONTERINGSANVISNING

KOIRAN TURVARISTIKKO  
ASENNUSOHJEET

[www.dogcages.uk.com](http://www.dogcages.uk.com)

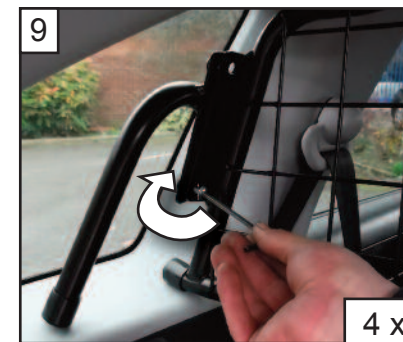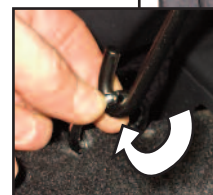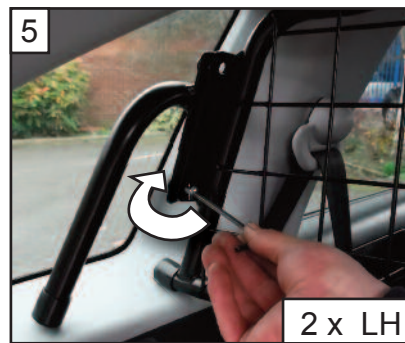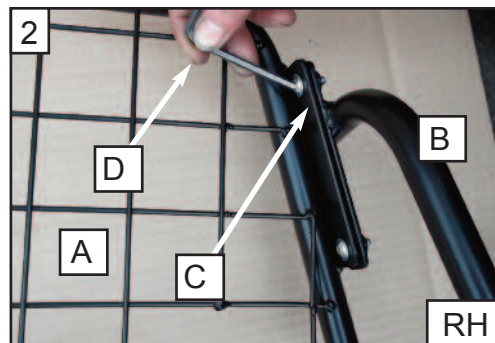

+G1273D