


KIT



A

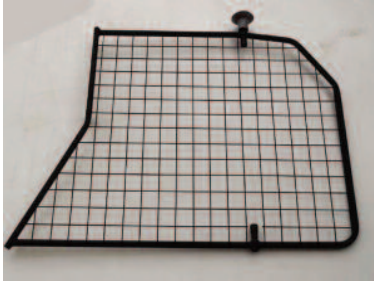






B X1



C x2



D x2

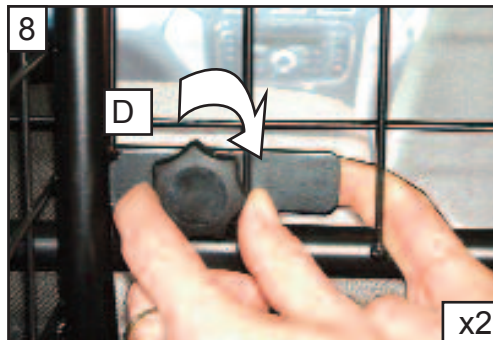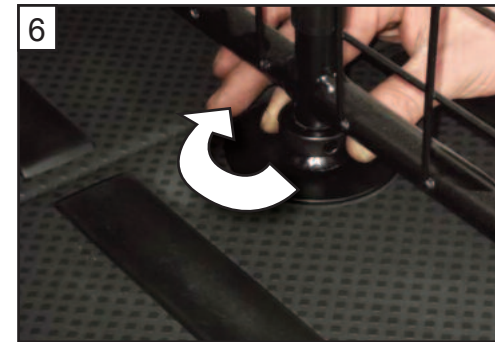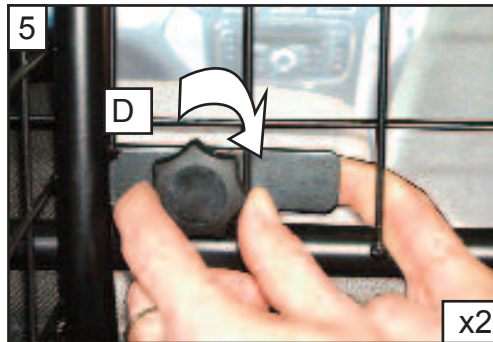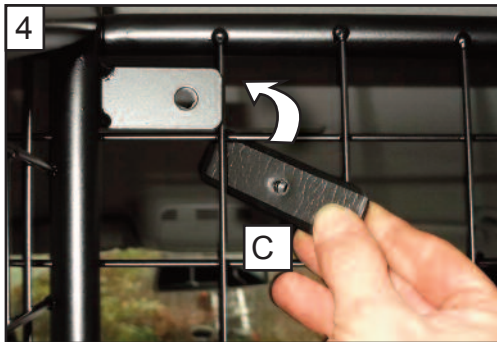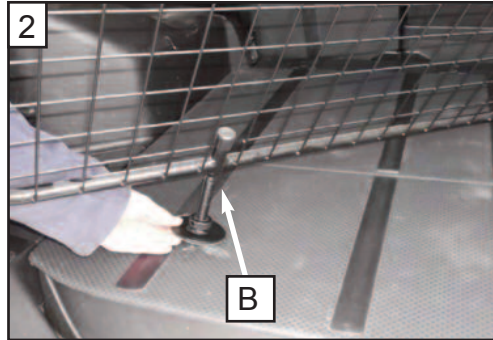

**Nissan X Trail  
2007 -2014  
G1274D**

**VARIABLE BOOT  
DIVIDER  
FITTING INSTRUCTION**

Periodically check the  
tightness of all fixings

t. 0044 (0)1827 713040

[www.dogcages.uk.com](http://www.dogcages.uk.com)  
[www.guardsmandogguards.co.uk](http://www.guardsmandogguards.co.uk)

subject to alteration without notice

G1274D is2 - SEP 12 apr16