



KIT

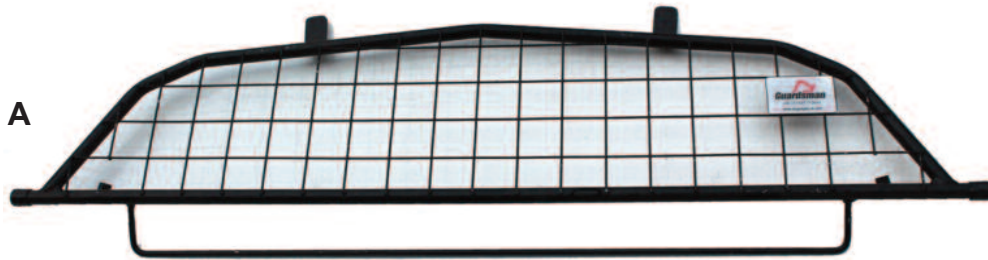







B x2

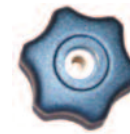

C x2



**Audi Q3 2011 >
G1277**

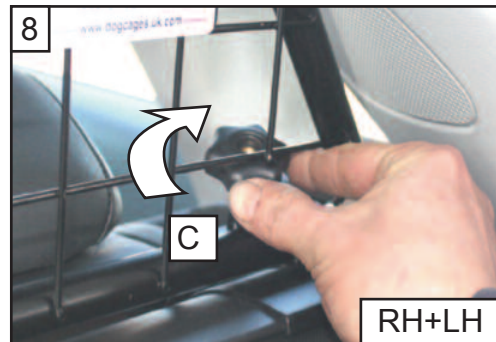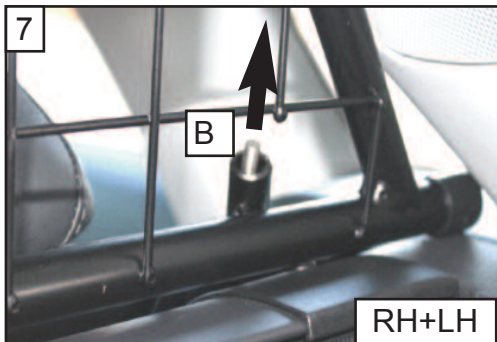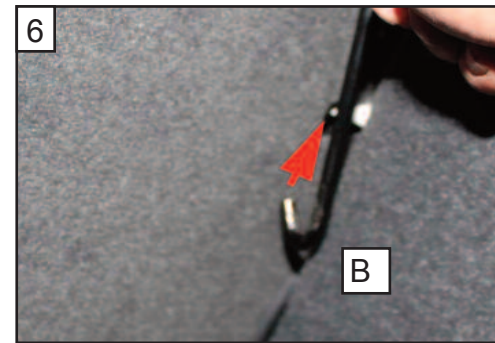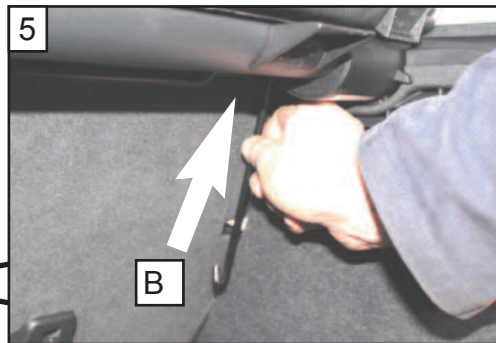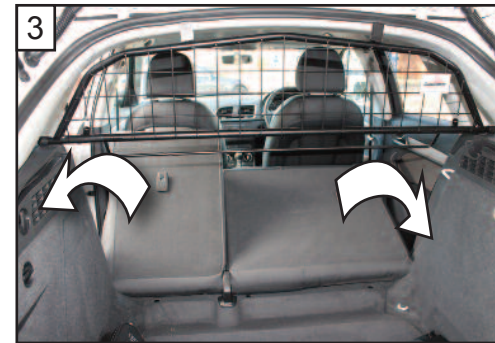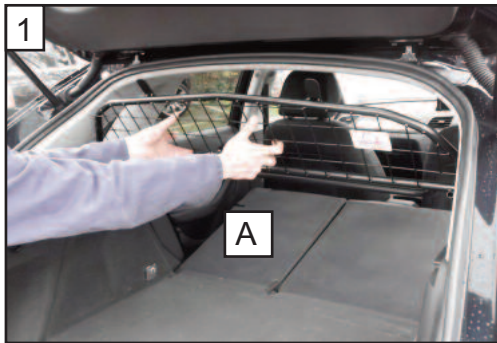

**DOG GUARD
FITTING INSTRUCTION**

**HUNDESCHUTZGITTER
EINBAUANLEITUNG**

**PROTECTION CONTRE LES CHIENS
INSTRUCTIONS DE MONTAGE**

**HUNDEGITTER
MONTERINGSVEJLEDNING**

**CONJUNTO PROTECTOR
PARA PERROS
INSTRUCCIONES DE MONTAJE**

**KIT BARRIERA CANI
ISTRUZIONI DI MONTAGGIO**

**HUNDEVERNIGITTER
MONTASJEVEILEDNING**

**HONDENBESCHERMINGSREK
INBOUWINSTRUKTIES**

**SATS HUNDSKYDD
MONTERINGSANVISNING**


**KOIRAN TURVARISTIKKO
ASENNUSOHJEET**

tel no. (+44) 01827 713040

www.dogcages.uk.com



KIT

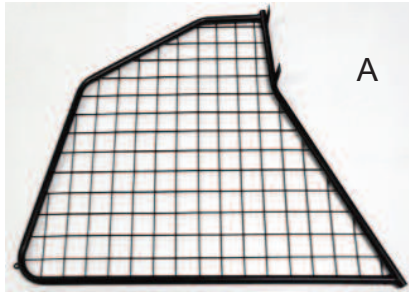

A

B x2









C x3
M6



D x1
M8



E

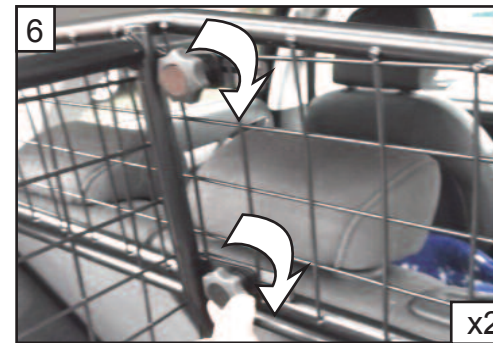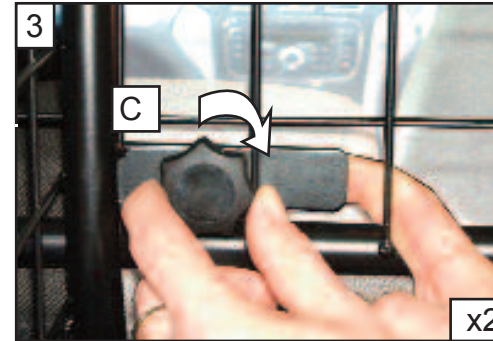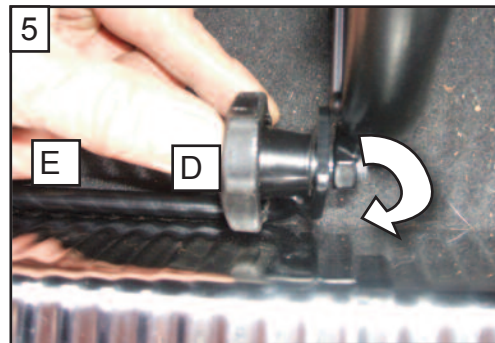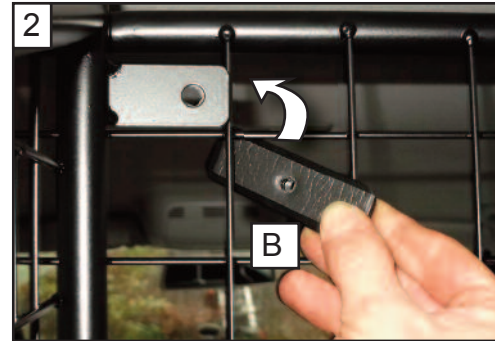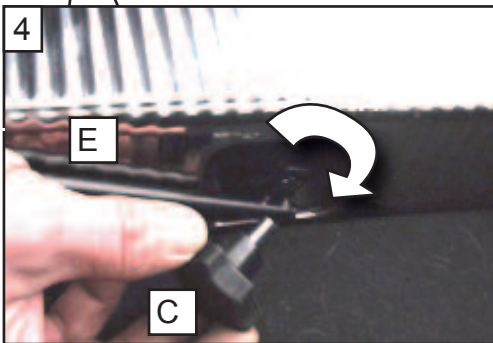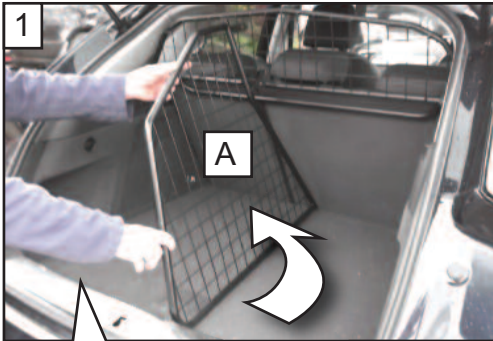

Audi Q3
G1277D

BOOT DIVIDER
FITTING INSTRUCTION

Check tightness of all
fixings periodically

tel no. 01827 713040
www.dogcages.uk.com

subject to alteration without notice