


KIT

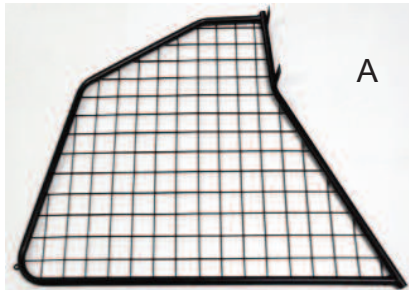

A

B x2









C x3
M6



D x1
M8



E

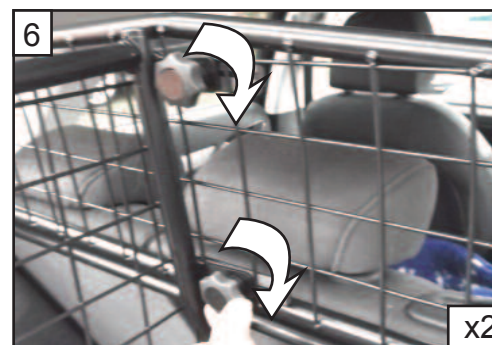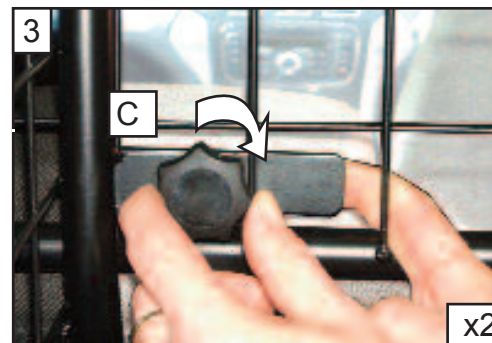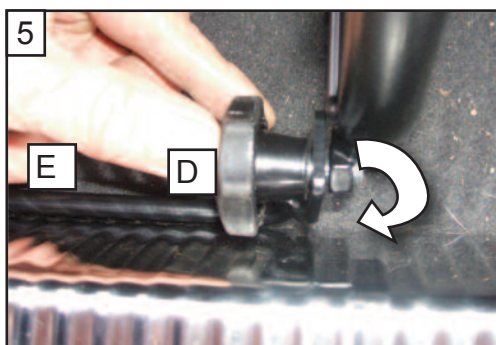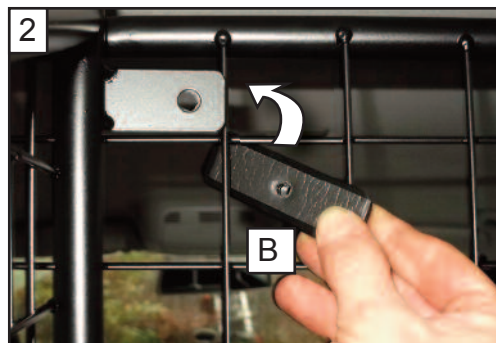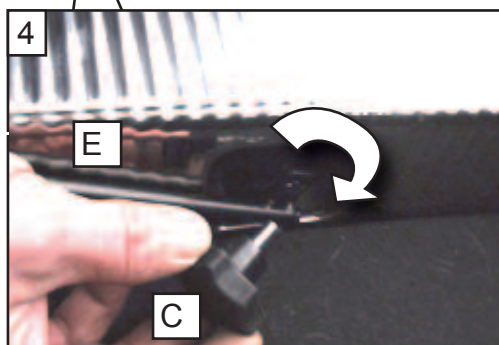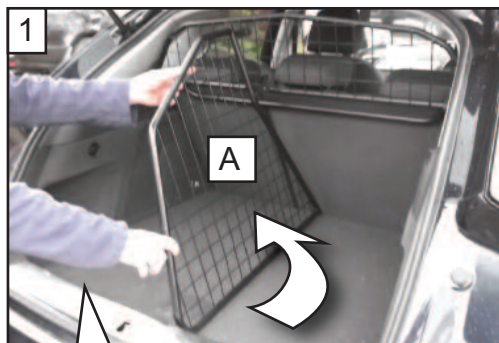

Audi Q3
G1277D

**BOOT DIVIDER
FITTING INSTRUCTION**

Check tightness of all
fixings periodically

tel no. 01827 713040
www.dogcages.uk.com

subject to alteration without notice