




KIT

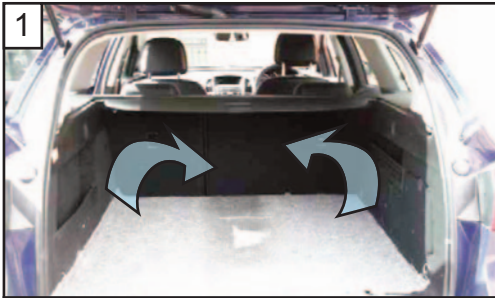



Fold seats Down

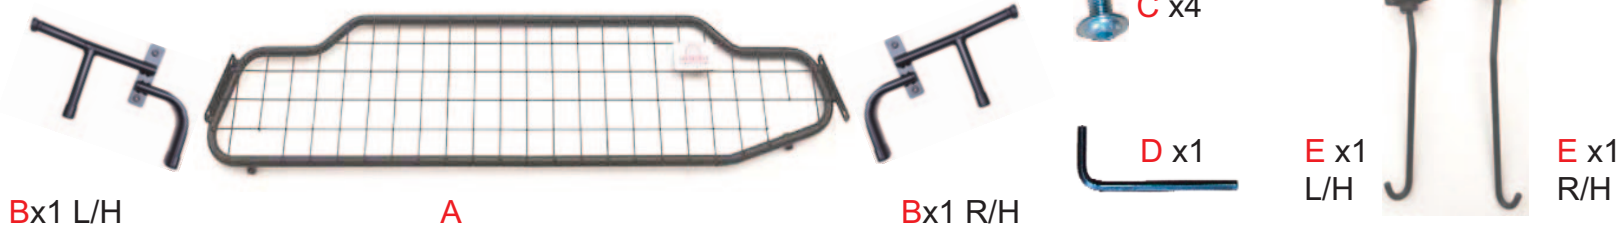


Remove blind

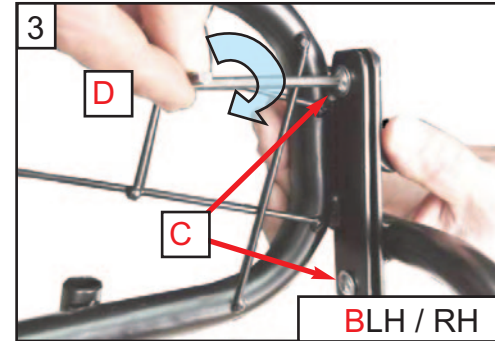

BLH / RH

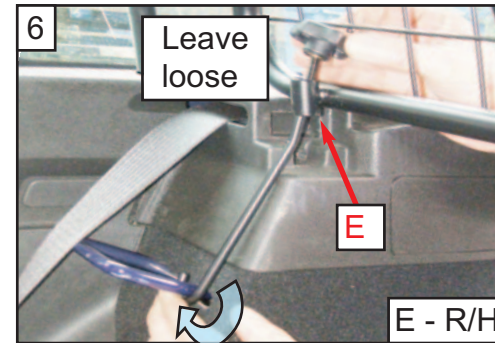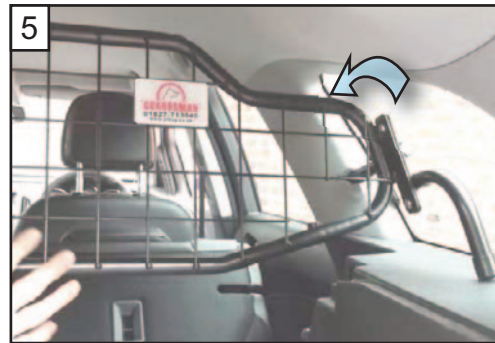


E - R/H

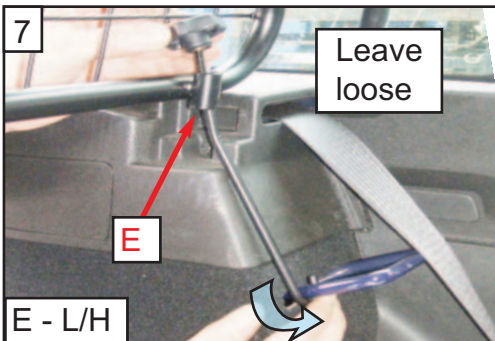

E - L/H



Fold seats Up

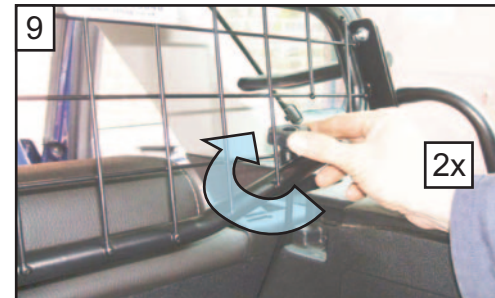

Tighten all Fixings



Vauxhall/ Opel Astra J
2010-2016
Sports Wagon
G1283

DOG GUARD
 FITTING INSTRUCTION

HUNDESCHUTZGITTER
 EINBAUANLEITUNG

PROTECTION CONTRE LES CHIENS
 INSTRUCTIONS DE MONTAGE

HUNDEGITTER
 MONTERINGSVEJLEDNING

CONJUNTO PROTECTOR PARA PERROS
 INSTRUCCIONES DE MONTAJE

KIT BARRIERA CANI
 ISTRUZIONI DI MONTAGGIO

HUNDEVERNGITTER
 MONTASJEVEILEDNING

HONDENBESCHERMINGSREK
 INBOUWINSTRUKTIES

SATS HUNDSKYDD
 MONTERINGSANVISNING

KOIRAN TURVARISTIKKO
 ASENNUSOHJEET



www.guardspandogguards.co.uk

G1283 is1 - 9/ 12 is2 - 8-18 is 3 1 /22