


KIT

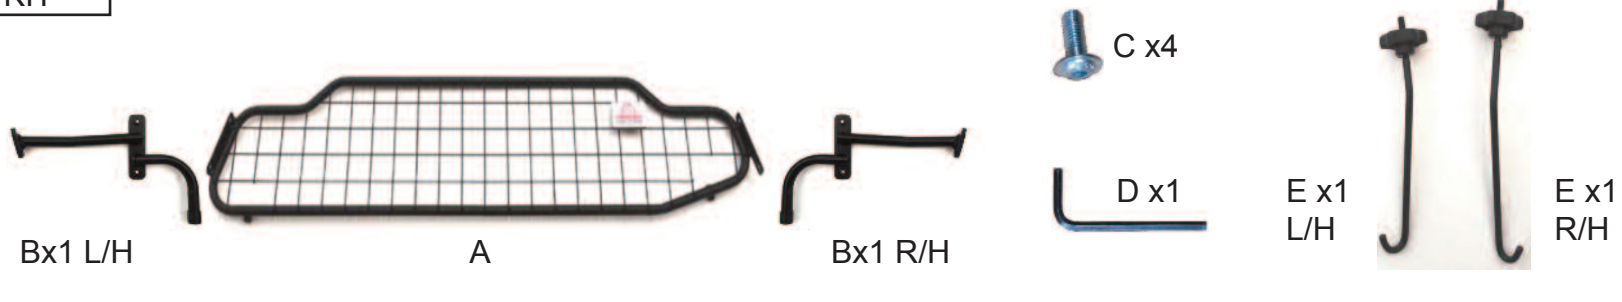

Vauxhall/ Opel Astra J
2010-2016
Sports Wagon
G1283

DOG GUARD
FITTING INSTRUCTION

HUNDESCHUTZGITTER
EINBAUANLEITUNG

PROTECTION CONTRE LES CHIENS
INSTRUCTIONS DE MONTAGE

HUNDEGITTER
MONTERINGSVEJLEDNING

CONJUNTO PROTECTOR PARA
PERROS
INSTRUCCIONES DE MONTAJE

KIT BARRIERA CANI
ISTRUZIONI DI MONTAGGIO





HUNDEVERNGITTER
MONTASJEVEILEDNING

HONDENBESCHERMINGSREK
INBOUWINSTRUKTIES


SATS HUNDSKYDD
MONTERINGSANVISNING

KOIRAN TURVARISTIKKO
ASENNUSOHJEET

tel no. +44 (0)1827 713040
www.dogcages.uk.com

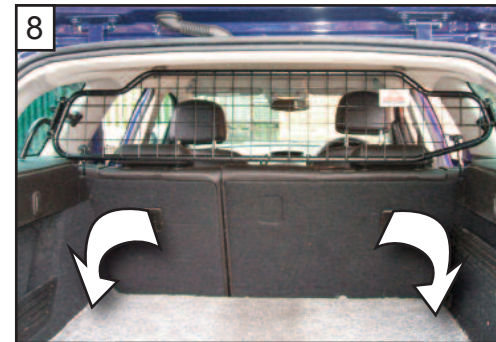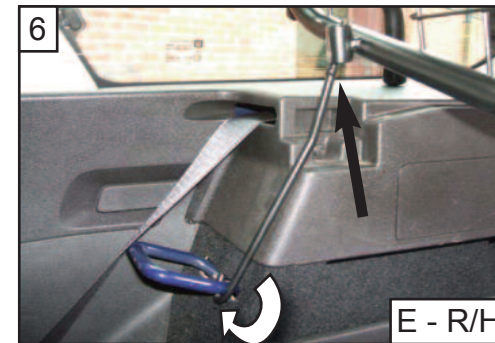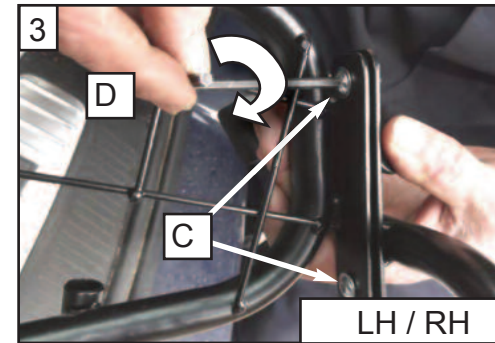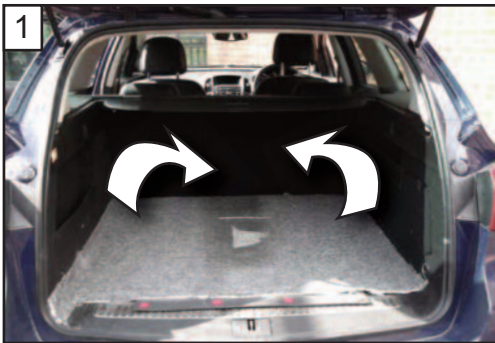

KIT

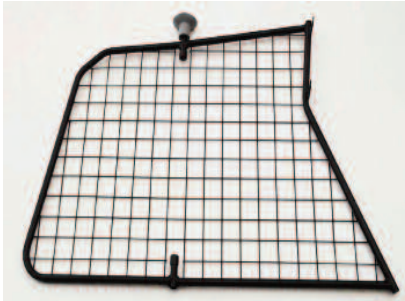

A



B



C x2







D x2



Vauxhall /Opel
Astra sports tourer
2010-2016
Boot Divider
G1283D

BOOT DIVIDER
FITTING INSTRUCTION

CAN ONLY BE USED IN
CONJUNCTION WITH
GUARDSMAN Astra Sports
Tourer Dog Guard - 2010-2016
PART No.G1283

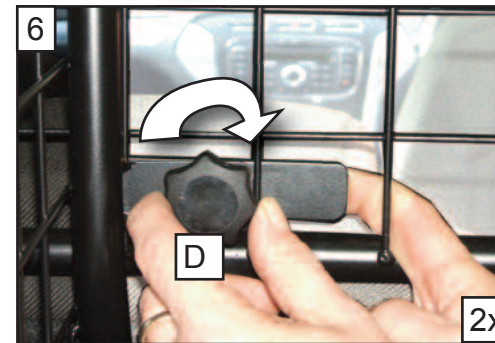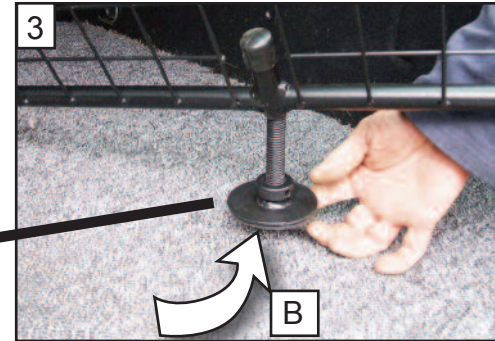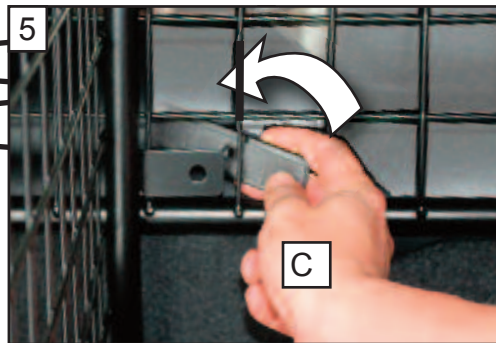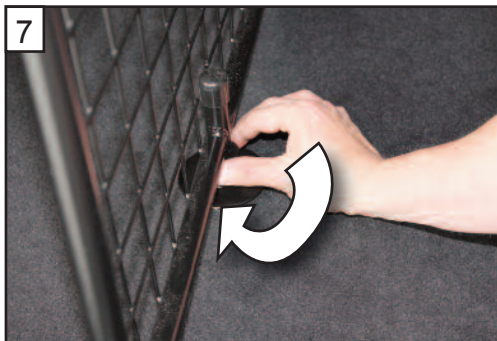

tel no. +44 (0)1827 713040
www.guardsmandogguards.co.uk
www.dogcages.uk.com

subject to alteration without notice