




KIT

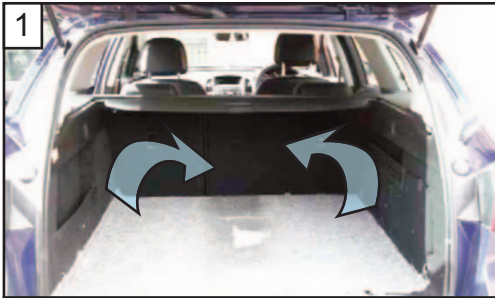



Fold seats Down

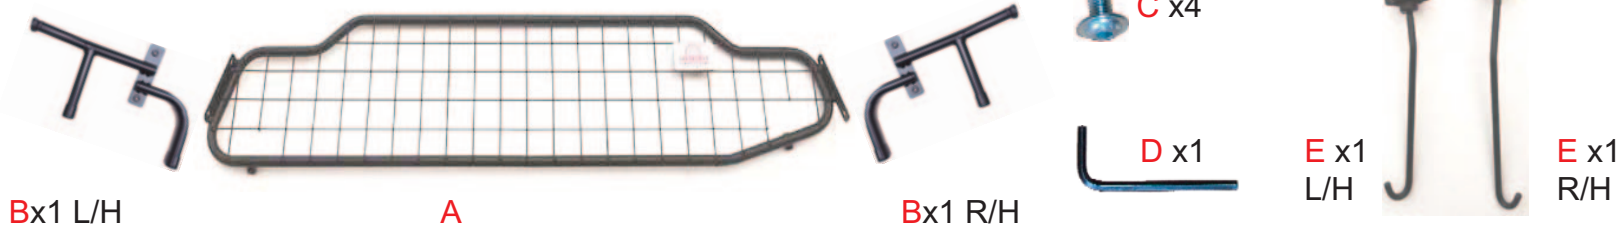


Remove blind

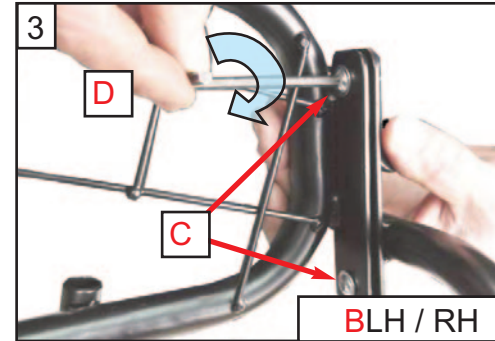


BLH / RH

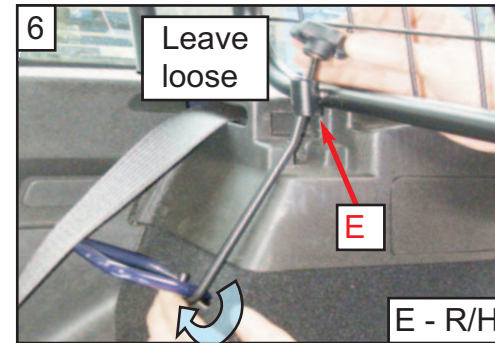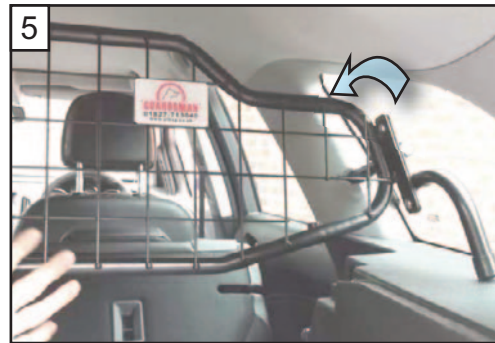

E - R/H

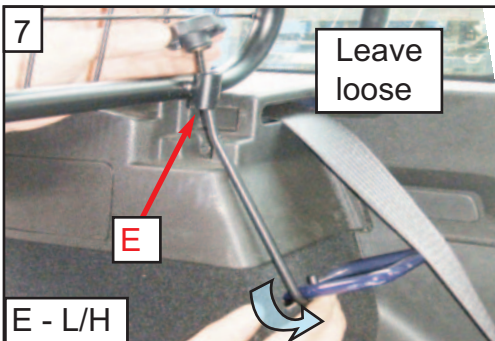

E - L/H

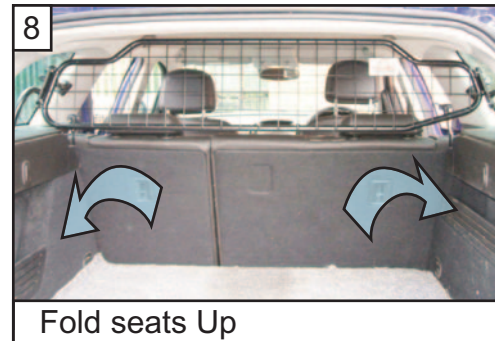

Fold seats Up



Tighten all Fixings



Vauxhall/ Opel Astra J
2010-2016
Sports Wagon
G1283

DOG GUARD
 FITTING INSTRUCTION

HUNDESCHUTZGITTER
 EINBAUANLEITUNG

PROTECTION CONTRE LES CHIENS
 INSTRUCTIONS DE MONTAGE

HUNDEGITTER
 MONTERINGSVEJLEDNING

CONJUNTO PROTECTOR PARA PERROS
 INSTRUCCIONES DE MONTAJE

KIT BARRIERA CANI
 ISTRUZIONI DI MONTAGGIO

HUNDEVERNGITTER
 MONTASJEVEILEDNING

HONDENBESCHERMINGSREK
 INBOUWINSTRUKTIES

SATS HUNDSKYDD
 MONTERINGSANVISNING

KOIRAN TURVARISTIKKO
 ASENNUSOHJEET



www.guardsmandogguards.co.uk

G1283 is1 - 9/ 12 is2 - 8-18 is 3 1 /22

KIT



C x2



D x2



A



B



Vauxhall /Opel
Astra sports tourer
2010-2016
Boot Divider
G1283D

**BOOT DIVIDER
FITTING INSTRUCTION**


CAN **ONLY** BE USED IN
CONJUNCTION WITH
GUARDSMAN

Astra Sports Tourer
Dog Guard -
2010-2016



PART No.G1283



'C' Grips on opposite side of mesh.
'C' Griffe auf der gegenüberliegenden
Seite des Netzes

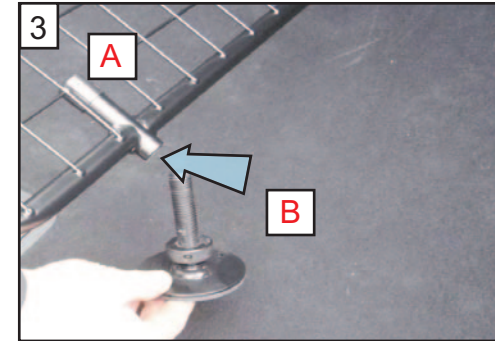

**! Do Not fully tighten !
! Nicht fest anziehen !**

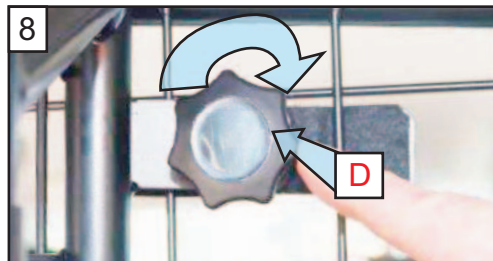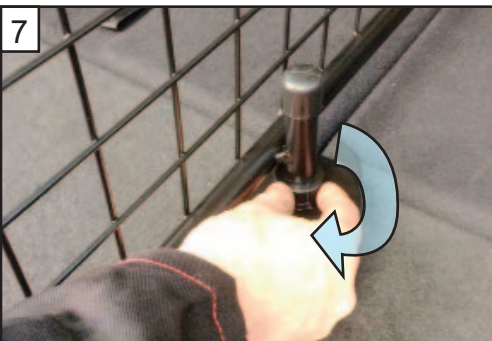

Tighten all fixings
Ziehen Sie alle Befestigungen fest



www.guardsmandogguards.co.uk