


KIT

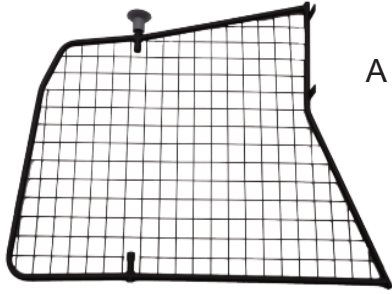

A



B X1



C x2




D x2




VW Passat estate
2011on
G1288D

BOOT DIVIDER
FITTING INSTRUCTION

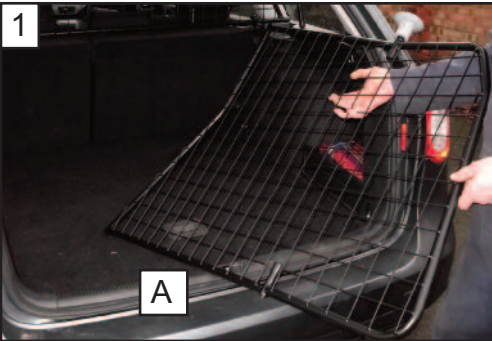

1

A

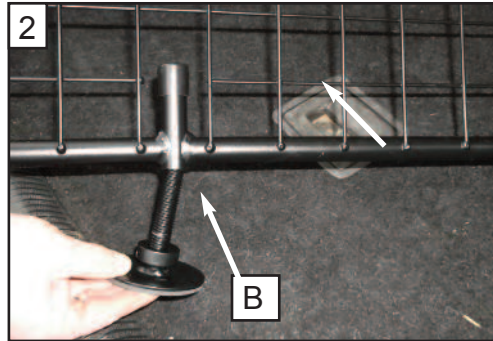


2


B



3

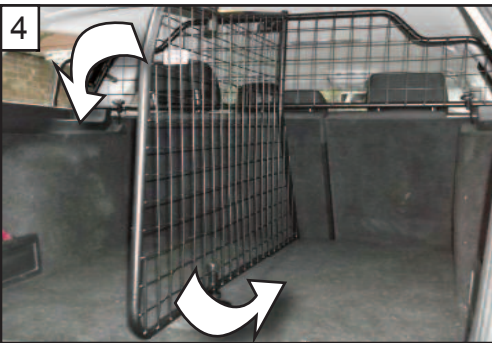


4

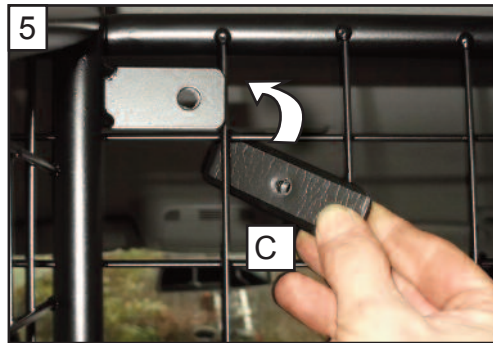

5

C

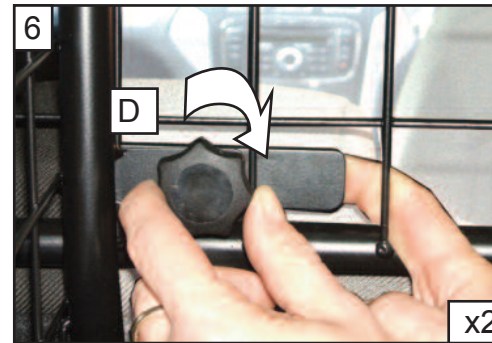

6

D


x2



7



8

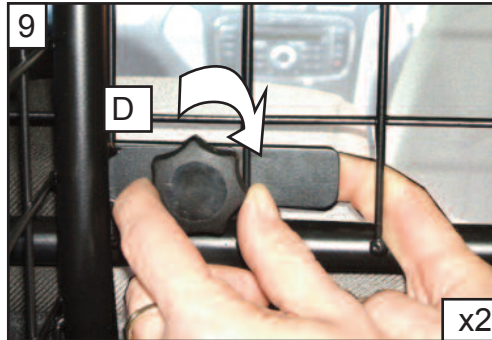

9

D

x2

tel no. 01827 713040
www.dogcages.uk.com

subject to alteration without notice