


KIT

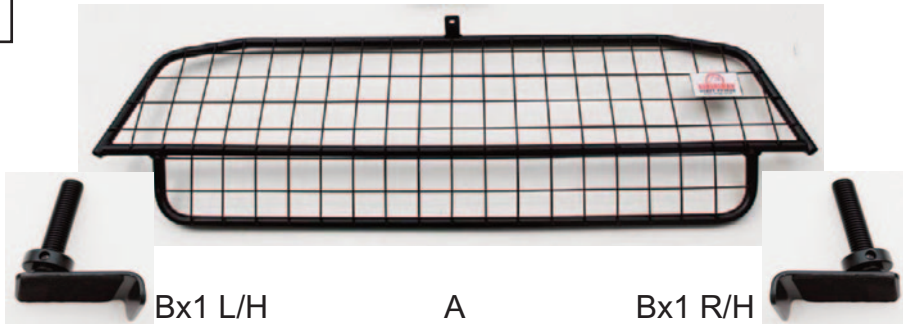

C x1



D x1



VW Tiguan - no sunroof
2008 - 2016
G1321

DOG GUARD
 FITTING INSTRUCTION

HUNDESCHUTZGITTER
 EINBAUANLEITUNG

PROTECTION CONTRE LES CHIENS
 INSTRUCTIONS DE MONTAGE

HUNDEGITTER
 MONTERINGSVEJLEDNING

CONJUNTO PROTECTOR PARA PERROS
 INSTRUCCIONES DE MONTAJE

KIT BARRIERA CANI
 ISTRUZIONI DI MONTAGGIO

HUNDEVERNGITTER
 MONTASJEVEILEDNING

HONDENBESCHERMINGSREK
 INBOUWINSTRUKTIES

SATS HUNDSKYDD
 MONTERINGSANVISNING

KOIRAN TURVARISTIKKO
 ASENNUSOHJEET

www.guardsmantogguards.co.uk

