








KIT

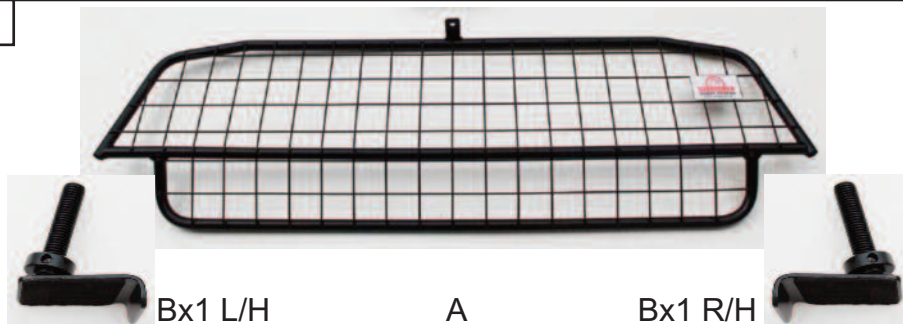

C x1



D x1

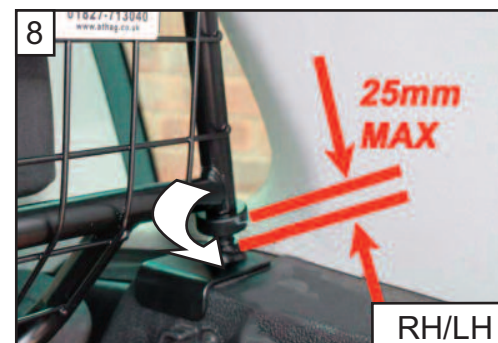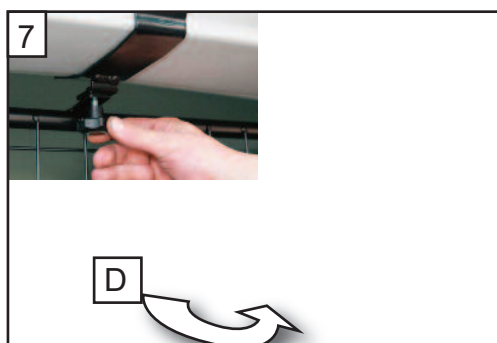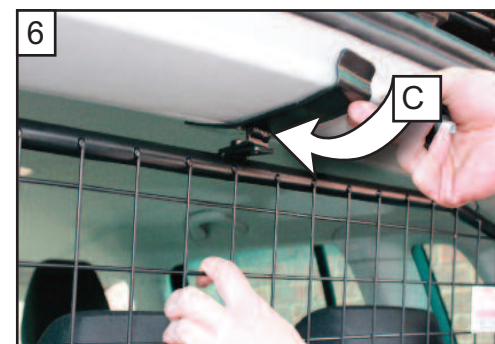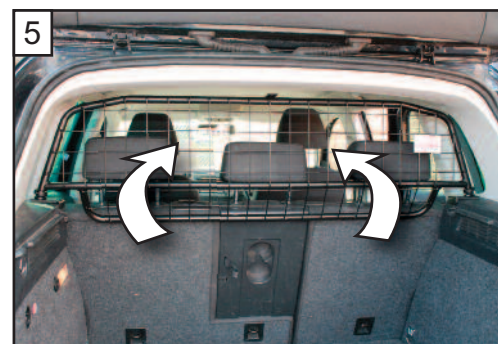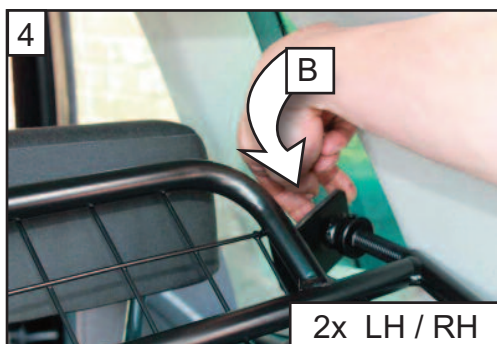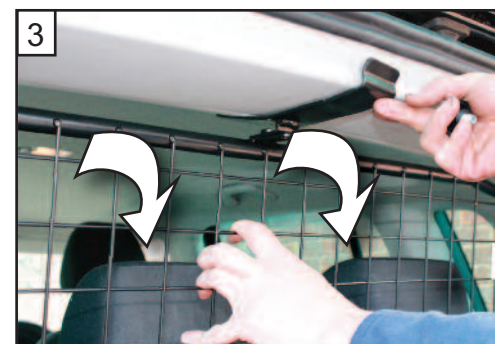

VW Tiguan - no sunroof **2008 - 2016** **G1321**

DOG GUARD
FITTING INSTRUCTION

HUNDESCHUTZGITTER
EINBAUANLEITUNG

PROTECTION CONTRE LES CHIENS
INSTRUCTIONS DE MONTAGE

HUNDEGITTER
MONTERINGSVEJLEDNING

CONJUNTO PROTECTOR PARA PERROS
INSTRUCCIONES DE MONTAJE

KIT BARRIERA CANI
ISTRUZIONI DI MONTAGGIO

HUNDEVERNIGITTER
MONTASJEVEILEDNING

HONDENBESCHERMINGSREK
INBOUWINSTRUCTIES

SATS HUNDSKYDD
MONTERINGSANVISNING

KOIRAN TURVARISTIKKO
ASENNUSOHJEET

tel no. +44 (0)1827 713040
www.dogcages.uk.com

