


KIT

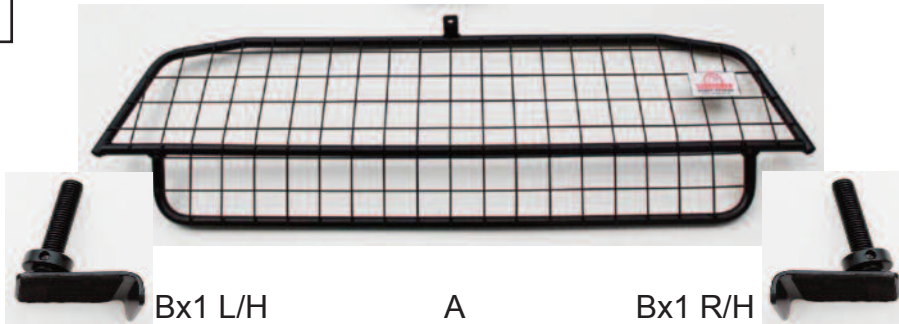

C x1



D x1



**VW Tiguan
2008 - 2016
G1321**

**DOG GUARD
FITTING INSTRUCTION**

**HUNDESCHUTZGITTER
EINBAUANLEITUNG**

**PROTECTION CONTRE LES CHIENS
INSTRUCTIONS DE MONTAGE**

**HUNDEGITTER
MONTERINGSVEJLEDNING**

**CONJUNTO PROTECTOR PARA PERROS
INSTRUCCIONES DE MONTAJE**

**KIT BARRIERA CANI
ISTRUZIONI DI MONTAGGIO**






**HUNDEVERNIGITTER
MONTASJEVEILEDNING**

**HONDENBESCHERMINGSREK
INBOUWINSTRUKTIES**


**SATS HUNDSKYDD
MONTERINGSANVISNING**

**KOIRAN TURVARISTIKKO
ASENNUSOHJEET**

tel no. +44 (0)1827 713040
www.dogcages.uk.com

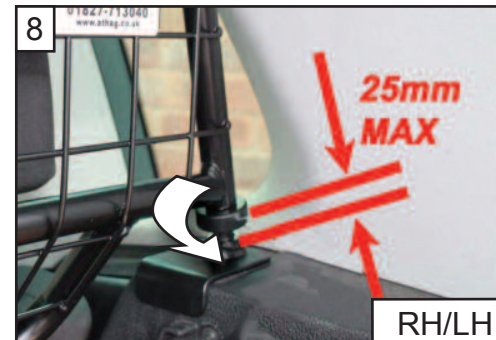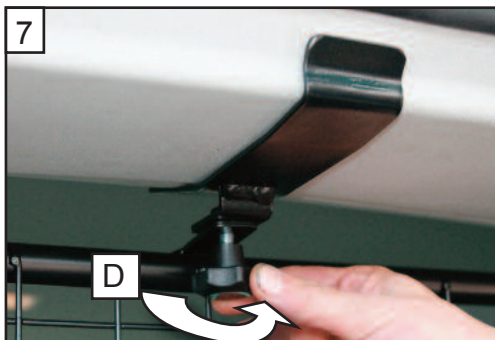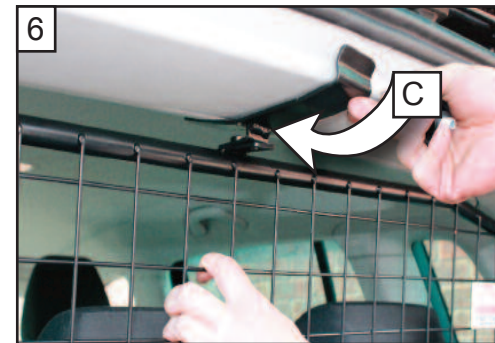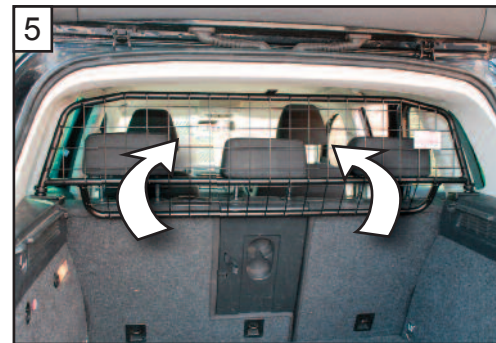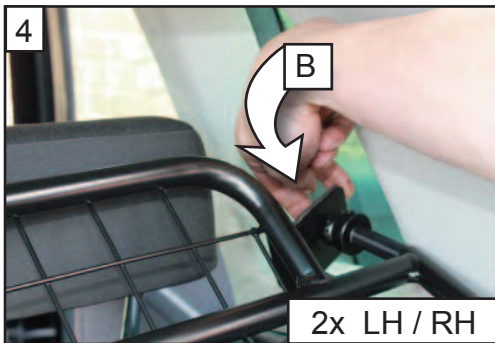

KIT

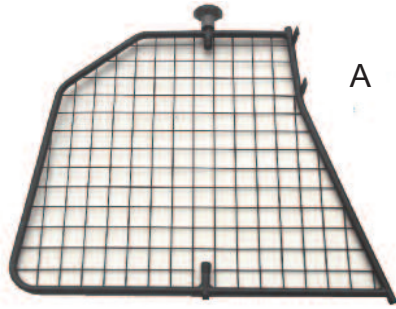

A







B X1



C x2



D x2

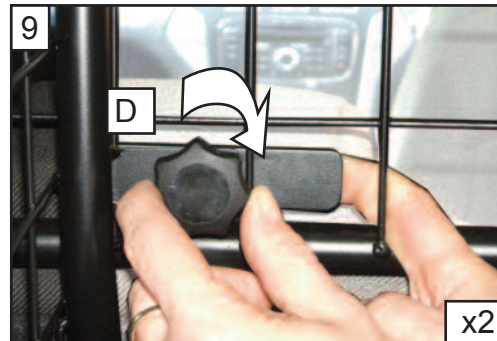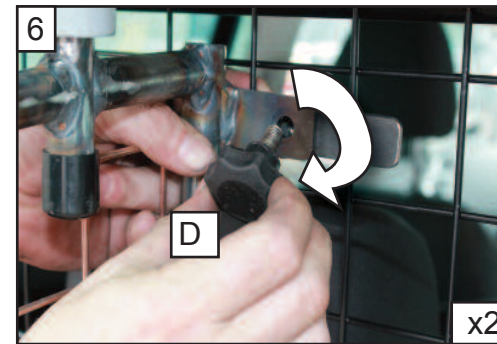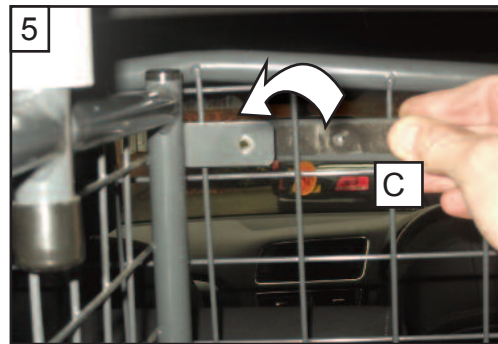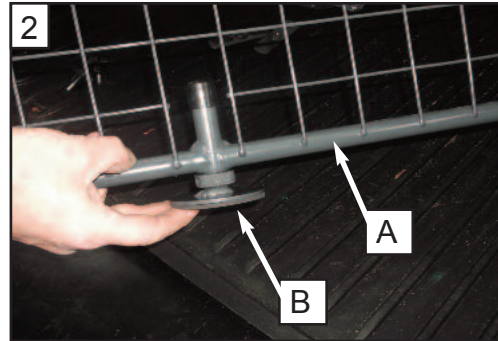

Volkswagen Tiguan

BOOT DIVIDER

FITTING INSTRUCTION
G1321D

To be used in conjunction with
GUARDSMAN
VW Tiguan Guard

Part number G1321

tel no. 01827 713040
www.dogcages.uk.com

subject to alteration without notice

G1321D is1 - SEP 12