

**Audi A6 Avant 2011 >  
G1322**

**DOG GUARD  
FITTING INSTRUCTION**

**HUNDESCHUTZGITTER  
EINBAUANLEITUNG**

**PROTECTION CONTRE LES CHIENS  
INSTRUCTIONS DE MONTAGE**

**HUNDEGITTER  
MONTERINGSVEJLEDNING**

**CONJUNTO PROTECTOR PARA PERROS  
INSTRUCCIONES DE MONTAJE**

**KIT BARRIERA CANI  
ISTRUZIONI DI MONTAGGIO**







**HUNDEVERNGITTER  
MONTASJEVEILEDNING**

**HONDENBESCHERMINGSREK  
INBOUWINSTRUKTIES**

**SATS HUNDSKYDD  
MONTERINGSANVISNING**

**KOIRAN TURVARISTIKKO  
ASENNUSOHJEET**

t. +44 (0)1827 713040  
www.dogcages.uk.com

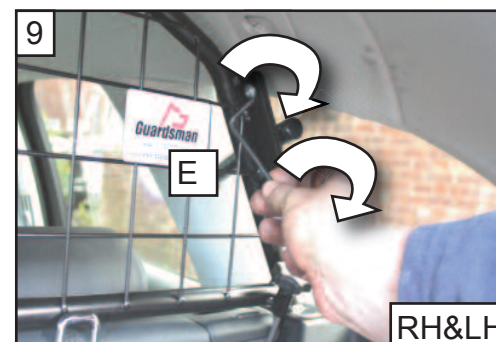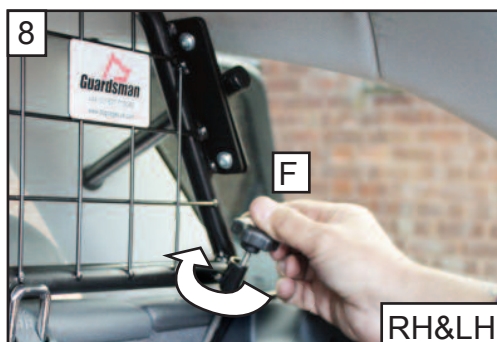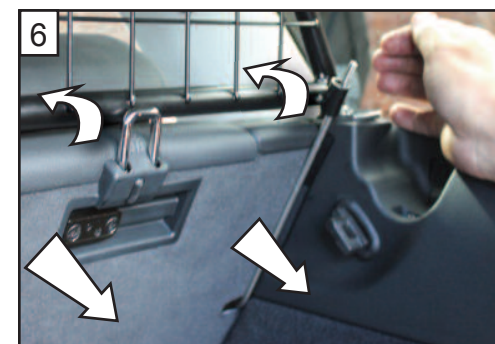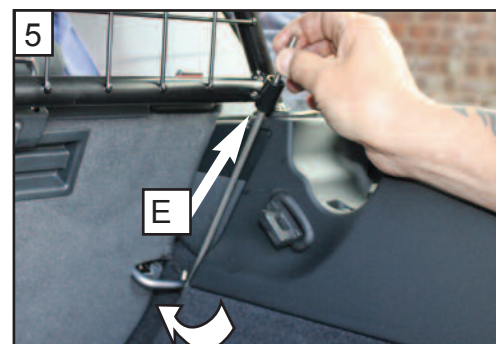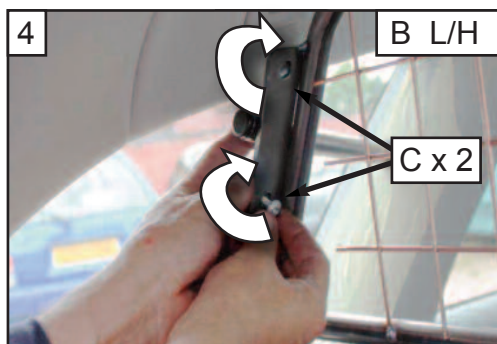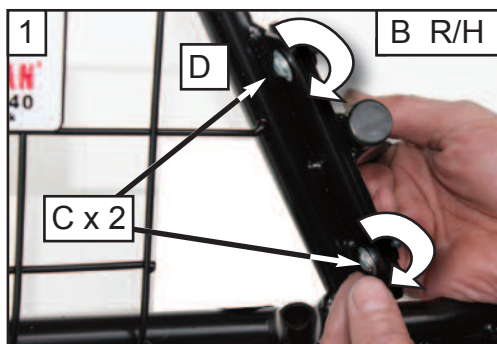

KIT



A



B



C x2









D x2



AUDI A6 AVANT 2011 >  
G1322D

**BOOT DIVIDER  
FITTING INSTRUCTION**

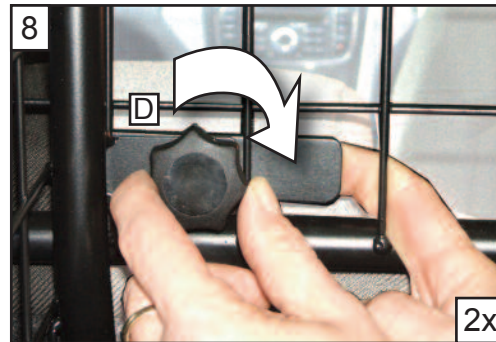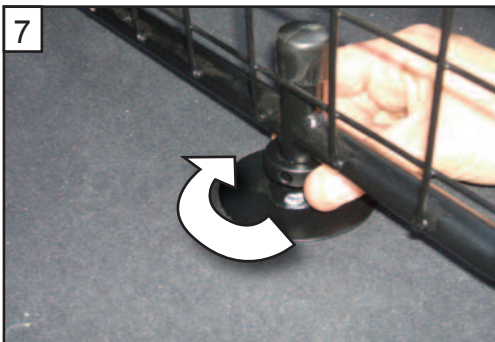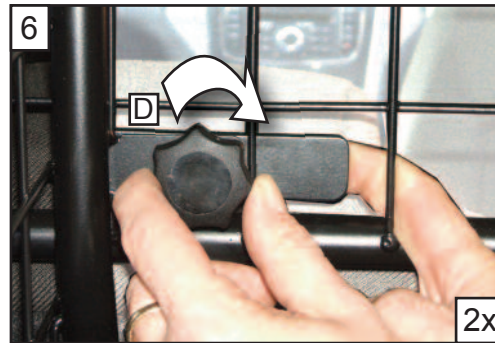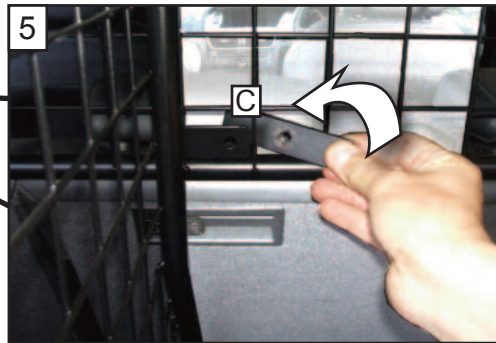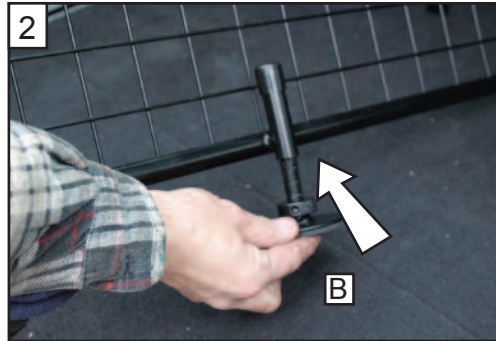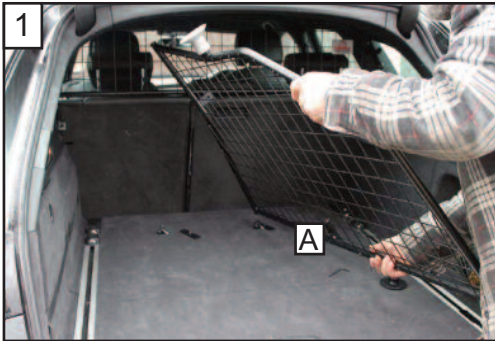

subject to alteration without notice  
technische Änderungen vorbehalten  
sous réserves de modifications techniques  
reservadas modificaciones técnicas  
med forbehold for tekniske  
con riserva di apportare modifiche tecniche  
tekniske forendringer vorbehalten  
technische wijzigingen voorbehouden  
med reservation for tekniska ändringar  
tekniset muutokset pidätetään