


KIT



A

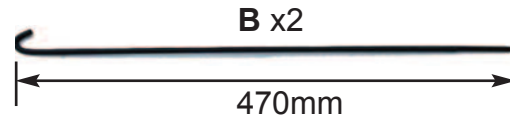

E x2



Mercedes ML 2011-2016
Mercedes GLE 2016 >
G1340

DOG GUARD
FITTING INSTRUCTION

HUNDESCHUTZGITTER
EINBAUANLEITUNG

PROTECTION CONTRE LES CHIENS
INSTRUCTIONS DE MONTAGE

HUNDEGITTER
MONTERINGSVEJLEDNING

CONJUNTO PROTECTOR PARA PERROS
INSTRUCCIONES DE MONTAJE



KIT BARRIERA CANI
ISTRUZIONI DI MONTAGGIO

HUNDEVERNGITTER
MONTASJEVEILEDNING

HONDENBESCHERMINGSREK
INBOUWINSTRUKTIES

SATS HUNDSKYDD
MONTERINGSANVISNING

KOIRAN TURVARISTIKKO
ASENNUSOHJEET

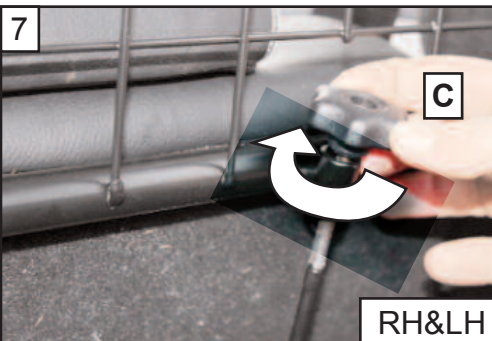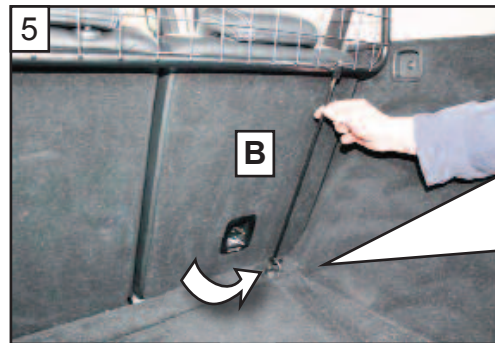

KIT



A



B



C x2



D x2



Mercedes ML
2011-2016 (W166)




Mercedes GLE
2016 >

G1340D

BOOT DIVIDER
FITTING INSTRUCTION

CAN BE USED IN
CONJUNCTION WITH
GUARDSMAN
Mercedes ML
Dog guard
PART No.G1340

tel no. +44 (0)1827 713040
www.dogcages.uk.com

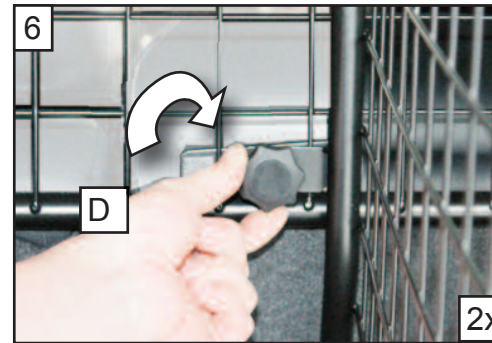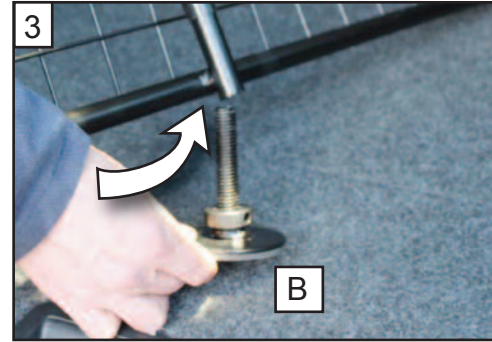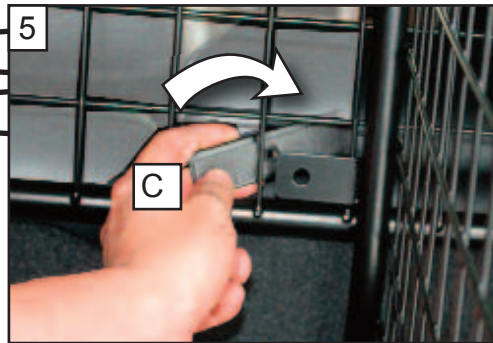

subject to alteration without notice

G1340D v2 12/16- v1 5/14