


KIT



A






B x2

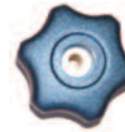

E x2



**Mercedes ML
2005-2011 (W164)
G1352**

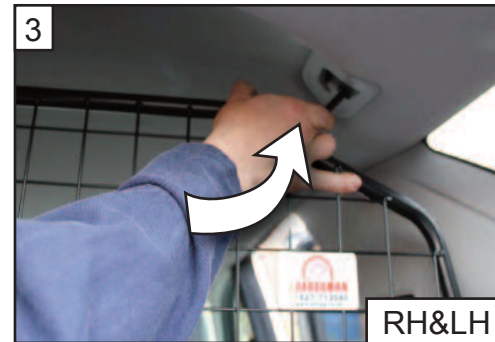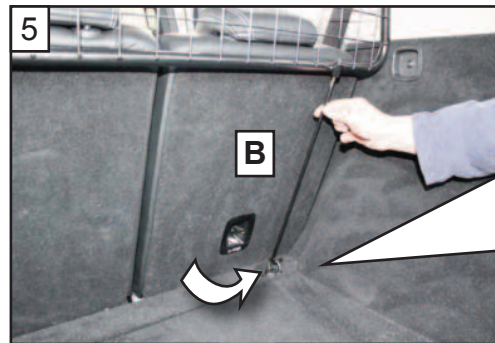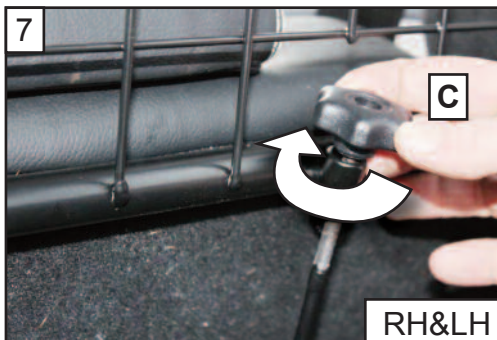

**DOG GUARD
FITTING INSTRUCTION**

**HUNDESCHUTZGITTER
EINBAUANLEITUNG**

**PROTECTION CONTRE LES CHIENS
INSTRUCTIONS DE MONTAGE**

**HUNDEGITTER
MONTERINGSVEJLEDNING**

**CONJUNTO PROTECTOR PARA PERROS
INSTRUCCIONES DE MONTAJE**

**KIT BARRIERA CANI
ISTRUZIONI DI MONTAGGIO**

**HUNDEVERNGITTER
MONTASJEVEILEDNING**

**HONDENBESCHERMINGSREK
INBOUWINSTRUKTIES**

**SATS HUNDSKYDD
MONTERINGSANVISNING**

**KOIRAN TURVARISTIKKO
ASENNUSOHJEET**

www.dogcages.uk.com

KIT



A








B



C x2



D x2

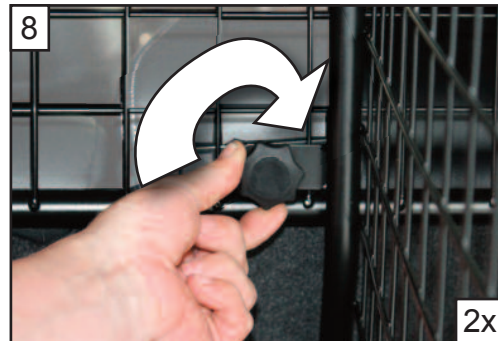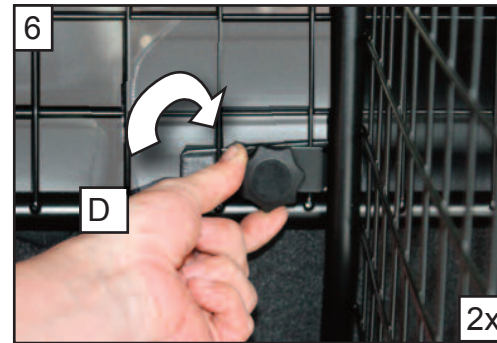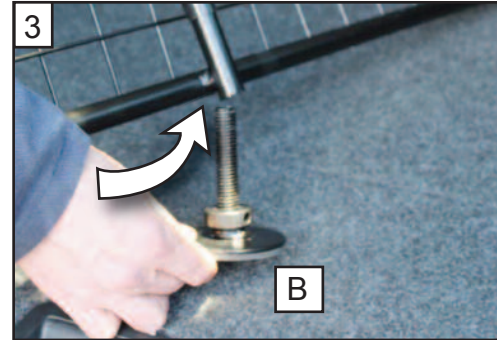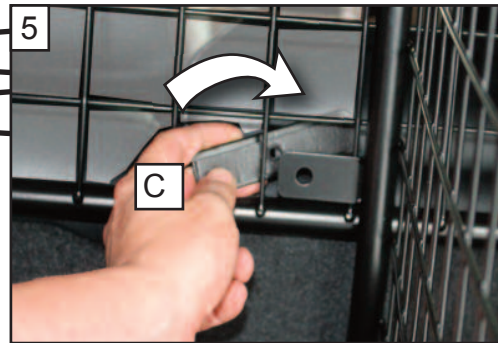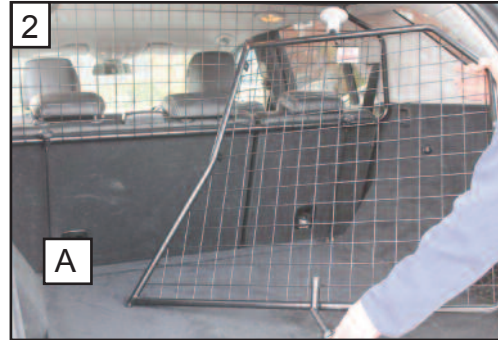

**Mercedes ML
2005-2011 (W164)
G1352D**

**BOOT DIVIDER
FITTING INSTRUCTION**

CAN BE USED IN
CONJUNCTION WITH
GUARDSMAN
Mercedes ML (W164)
Dog guard
PART No.G1352

tel no. +44 (0)1827 713040
www.dogcages.uk.com

subject to alteration without notice