



KIT

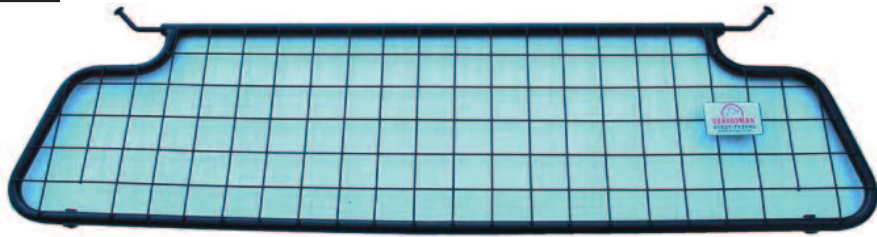

A



B x2

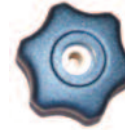

E x2



**Mercedes E Class Estate
(W212) 2009-2016
G1354**

**DOG GUARD
FITTING INSTRUCTION**

**HUNDESCHUTZGITTER
EINBAUANLEITUNG**

**PROTECTION CONTRE LES CHIENS
INSTRUCTIONS DE MONTAGE**

**HUNDEGITTER
MONTERINGSVEJLEDNING**

**CONJUNTO PROTECTOR PARA PERROS
INSTRUCCIONES DE MONTAJE**


**KIT BARRIERA CANI
ISTRUZIONI DI MONTAGGIO**

**HUNDEVERNGITTER
MONTASJEVEILEDNING**

**HONDENBESCHERMINGSREK
INBOUWINSTRUKTIES**

**SATS HUNDSKYDD
MONTERINGSANVISNING**


**KOIRAN TURVARISTIKKO
ASENNUSOHJEET**

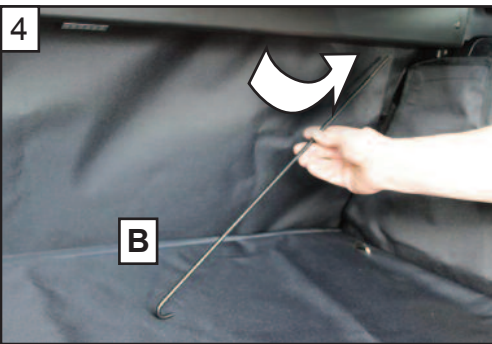


B



RH&LH

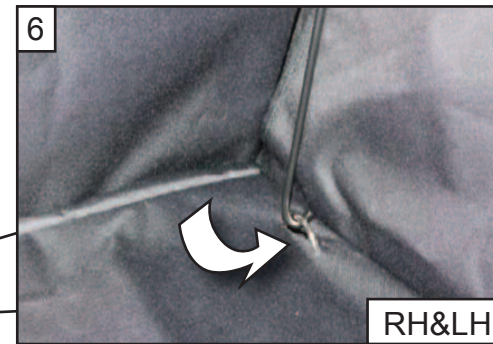

RH&LH

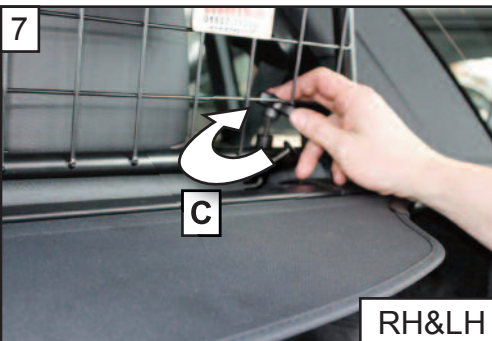

C

RH&LH



KIT



A



B



C x2



D x2









Mercedes E Class Estate
(W212) 2009 -2017
G1354D

BOOT DIVIDER
FITTING INSTRUCTION

CAN BE USED IN
CONJUNCTION WITH
GUARDSMAN
Mercedes C Class
Dog Guard
PART No.G1355

tel no. +44 (0)1827 713040
www.dogcages.uk.com

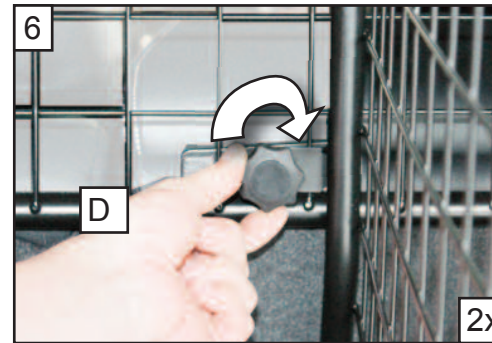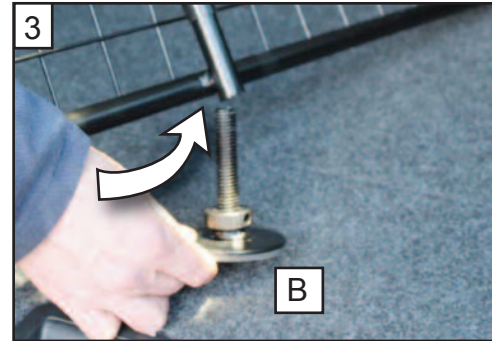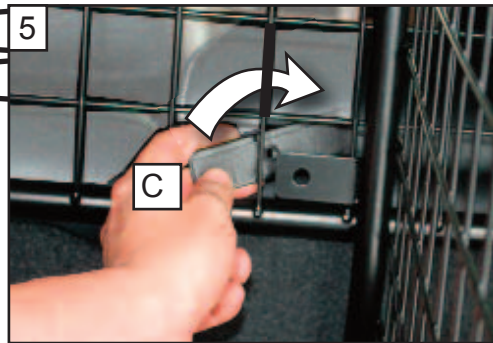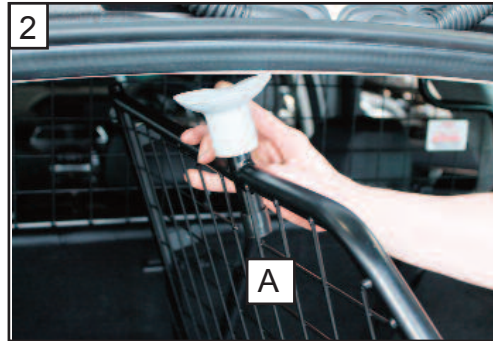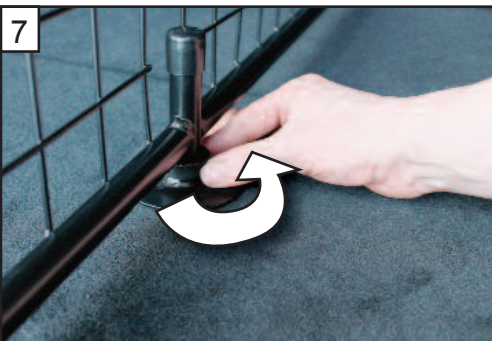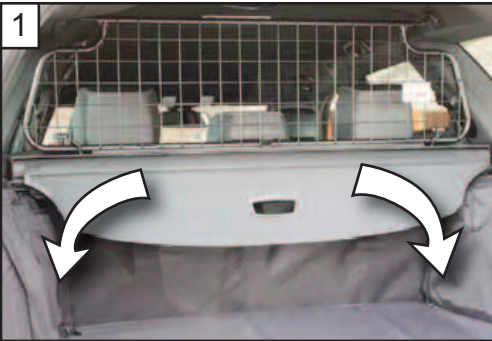

subject to alteration without notice