

KIT



Bx1 L/H



A



Bx1 R/H

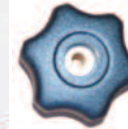


C x4

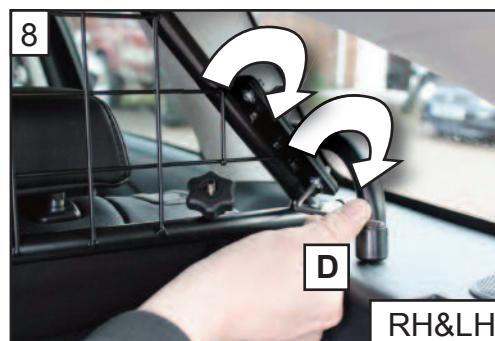
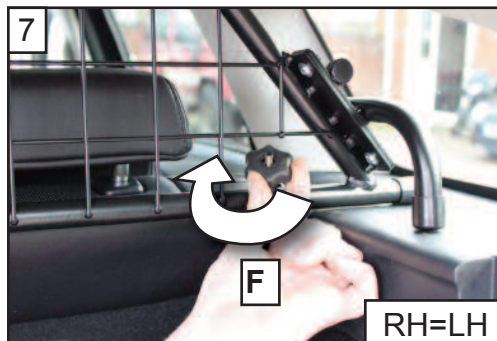
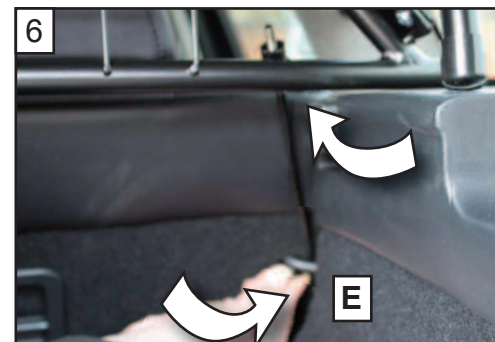
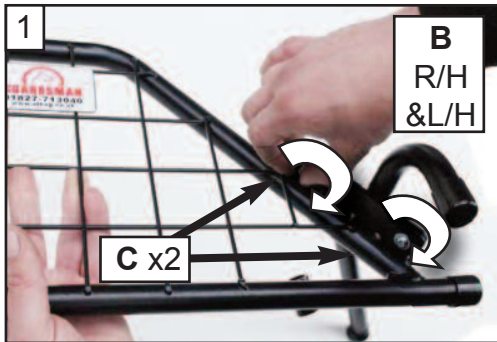

D x1



E x2



F x2

**Mazda 6 tourer
2013 >
G1359**

**DOG GUARD
FITTING INSTRUCTION**

**HUNDESCHUTZGITTER
EINBAUANLEITUNG**

**PROTECTION CONTRE LES CHIENS
INSTRUCTIONS DE MONTAGE**

**HUNDEGITTER
MONTERINGSVEJLEDNING**

**CONJUNTO PROTECTOR PARA
PERROS
INSTRUCCIONES DE MONTAJE**


**KIT BARRIERA CANI
ISTRUZIONI DI MONTAGGIO**

**HUNDEVERNIGITTER
MONTASJEVEILEDNING**

**HONDENBESCHERMINGSREK
INBOUWINSTRUKTIES**

**SATS HUNDSKYDD
MONTERINGSANVISNING**

**KOIRAN TURVARISTIKKO
ASENNUSOHJEET**



+G1359D www.dogcages.uk.com