
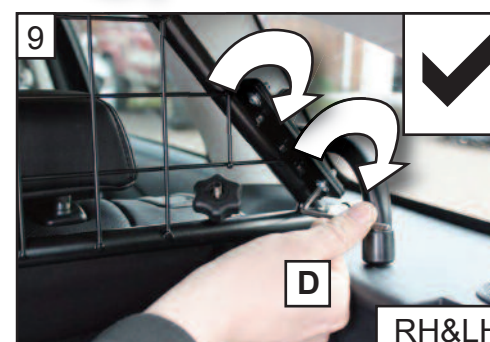
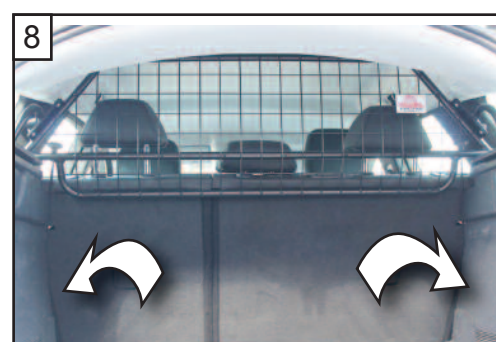
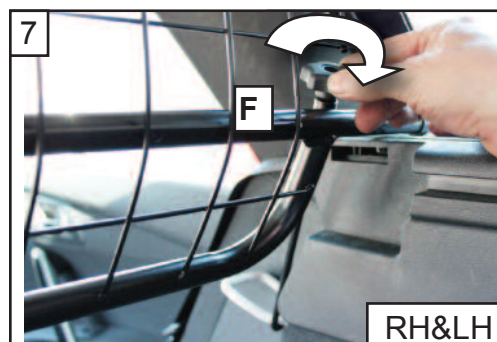
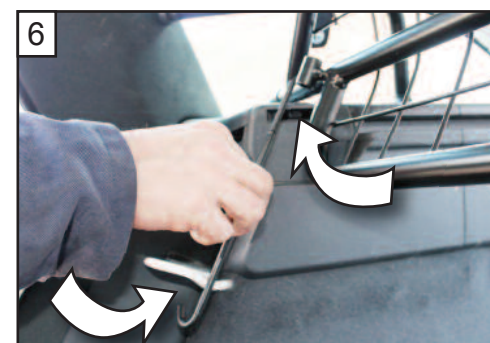
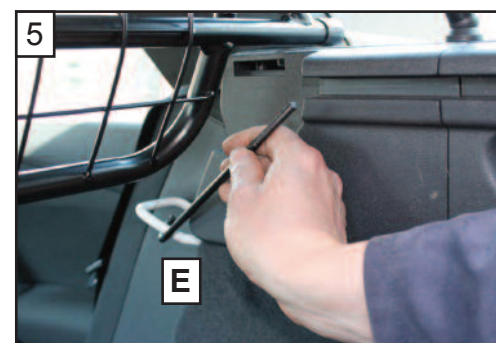
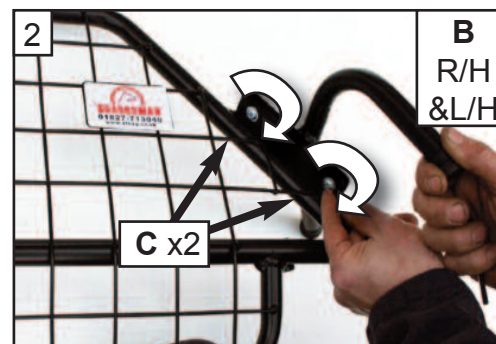


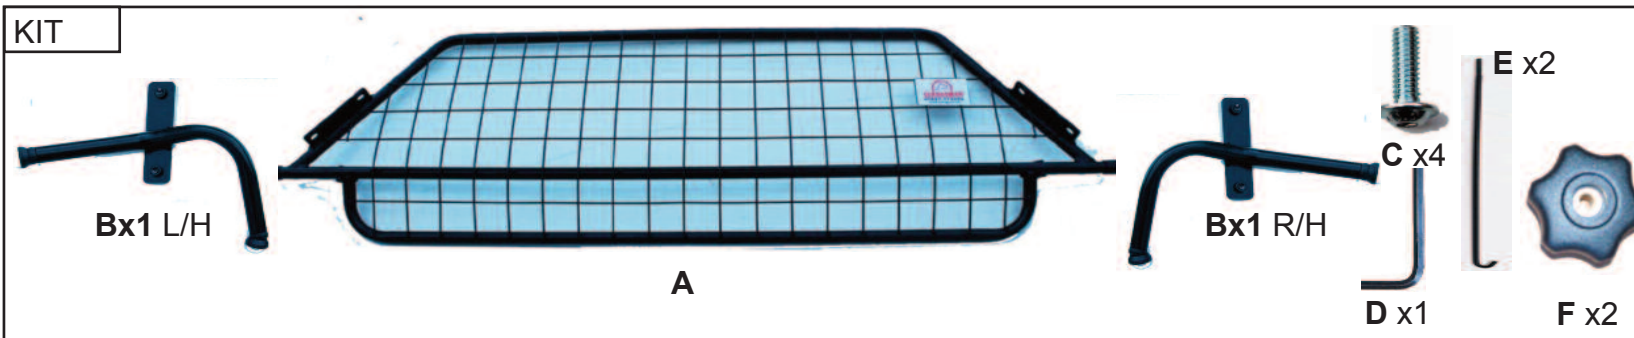

Peugeot 508sw
2011 >
G1361

DOG GUARD
 FITTING INSTRUCTION

HUNDESCHUTZGITTER
 EINBAUANLEITUNG

PROTECTION CONTRE LES CHIENS
 INSTRUCTIONS DE MONTAGE

HUNDEGITTER
 MONTERINGSVEJLEDNING

CONJUNTO PROTECTOR PARA
PERROS
 INSTRUCCIONES DE MONTAJE

KIT BARRIERA CANI
 ISTRUZIONI DI MONTAGGIO

HUNDEVERNGITTER
 MONTASJEVEILEDNING


HONDENBESCHERMINGSREK
 INBOUWINSTRUKTIES

SATS HUNDSKYDD
 MONTERINGSANVISNING

KOIRAN TURVARISTIKKO
 ASENNUSOHJEET

+G1361D www.dogcages.uk.com

KIT

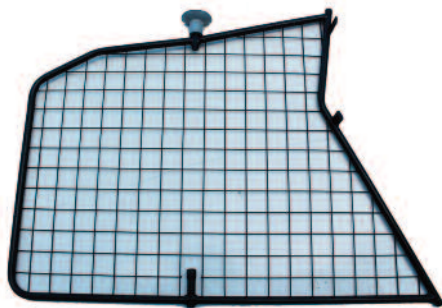

A



B



C x2



D x2








**Peugeot 508SW
2013 onwards
G1361D**

**BOOT DIVIDER
FITTING INSTRUCTION**

CAN BE USED IN
CONJUNCTION WITH
GUARDSMAN
Peugeot 508SW
Dog guard
PART No.G1361

tel no. +44 (0)1827 713040
www.dogcages.uk.com

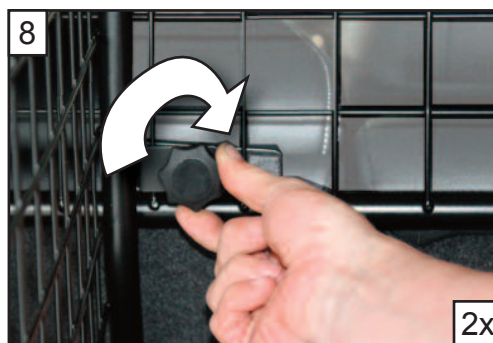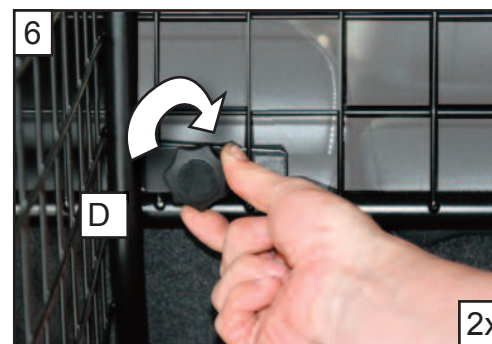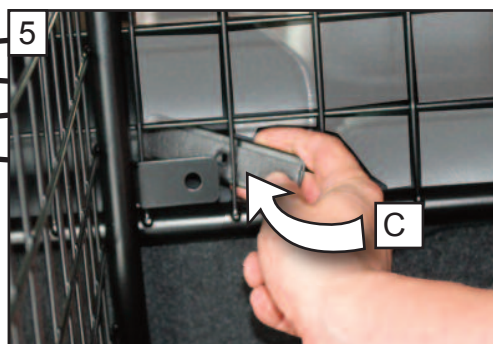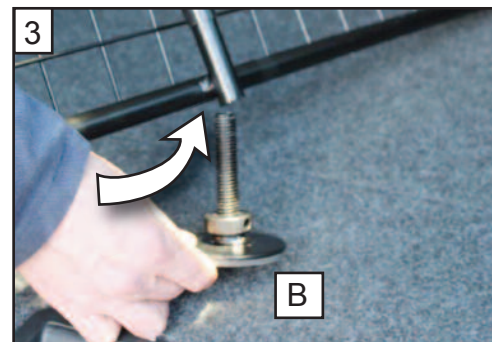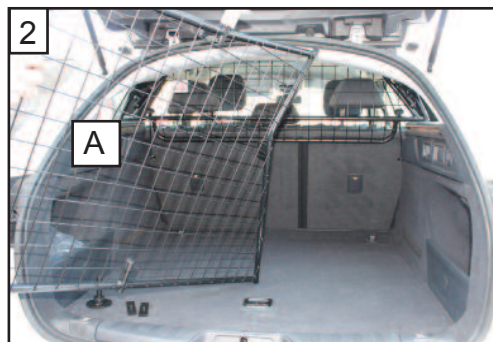

subject to alteration without notice

G1361D v1 - 6/14