


KIT

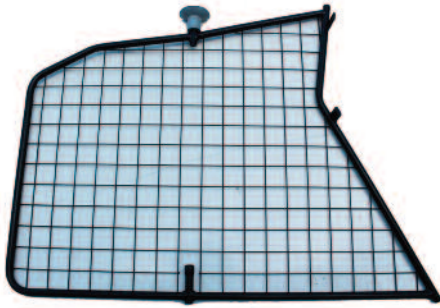

A



B




C x2




D x2



1

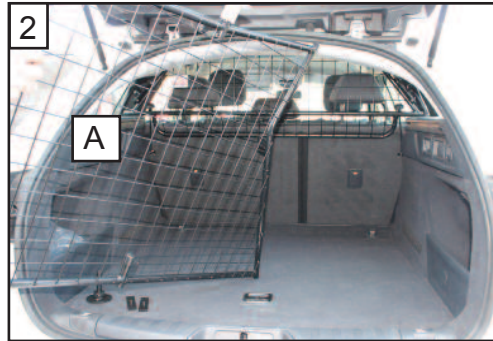

A

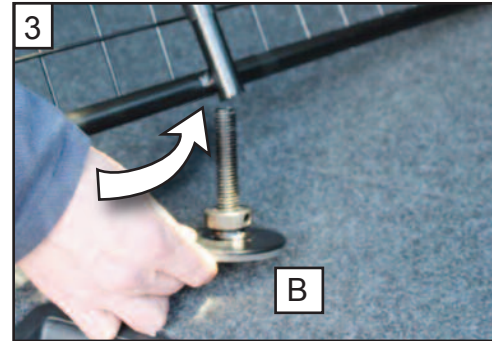


3

B




4

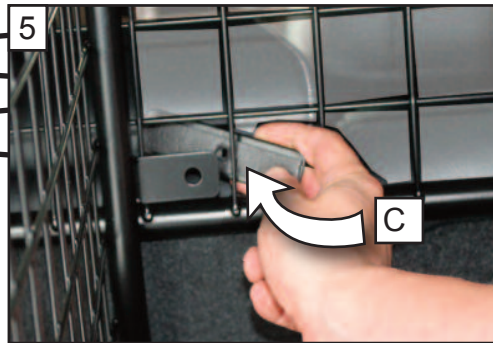

5

C

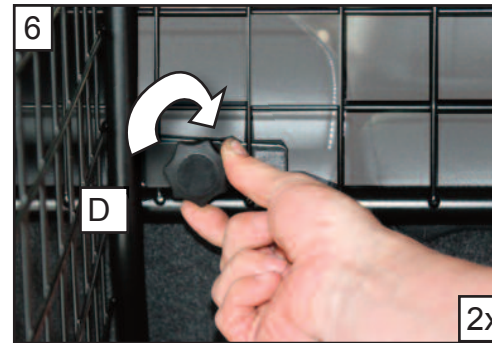


6

D

2x



7

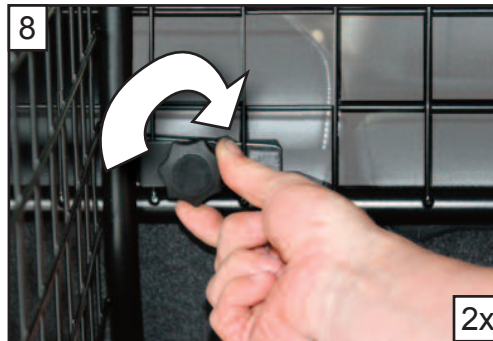

8

2x



9

Peugeot 508SW  
2013 onwards  
G1361D

**BOOT DIVIDER**  
FITTING INSTRUCTION

CAN BE USED IN  
CONJUNCTION WITH  
GUARDSMAN  
Peugeot 508SW  
Dog guard  
PART No.G1361

tel no. +44 (0)1827 713040  
[www.dogcages.uk.com](http://www.dogcages.uk.com)

subject to alteration without notice

G1361D v1 - 6/14