



KIT

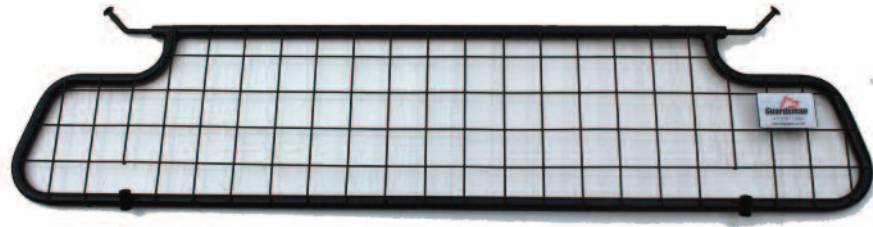

A



B x2

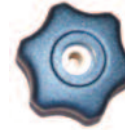

E x2



**Mercedes C Class Estate
(W205) 2014 >
G1391**

**DOG GUARD
FITTING INSTRUCTION**

**HUNDESCHUTZGITTER
EINBAUANLEITUNG**

**PROTECTION CONTRE LES CHIENS
INSTRUCTIONS DE MONTAGE**

**HUNDEGITTER
MONTERINGSVEJLEDNING**

**CONJUNTO PROTECTOR PARA PERROS
INSTRUCCIONES DE MONTAJE**





**KIT BARRIERA CANI
ISTRUZIONI DI MONTAGGIO**

**HUNDEVERNGITTER
MONTASJEVEILEDNING**

**HONDENBESCHERMINGSREK
INBOUWINSTRUKTIES**

**SATS HUNDSKYDD
MONTERINGSANVISNING**

**KOIRAN TURVARISTIKKO
ASENNUSOHJEET**

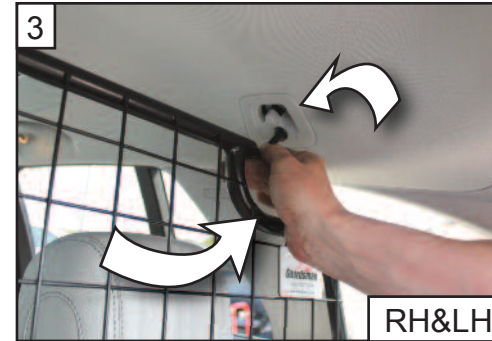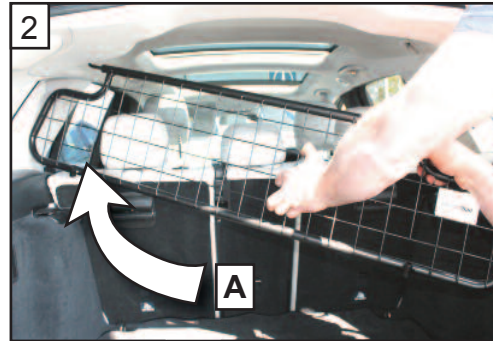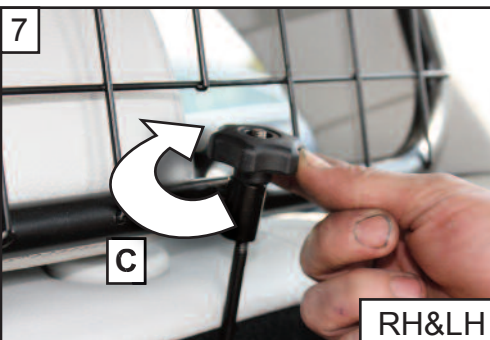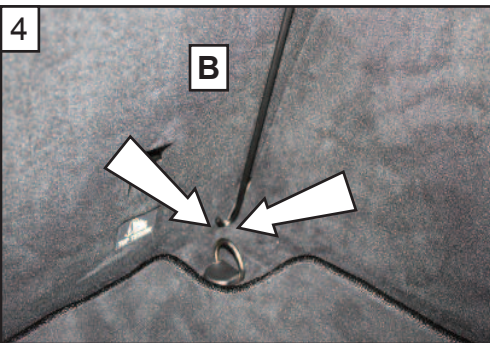

KIT



A



B



C x2



D x2








Mercedes C Class Estate
(W205) 2014 >
G1391D

BOOT DIVIDER
FITTING INSTRUCTION

CAN BE USED IN
CONJUNCTION WITH
GUARDSMAN
Mercedes C Class
Dog Guard
(G1391)

tel no. +44 (0)1827 713040
www.dogcages.uk.com

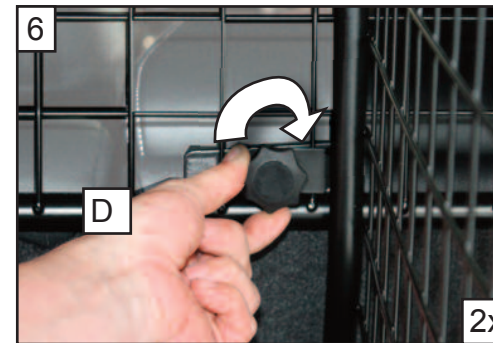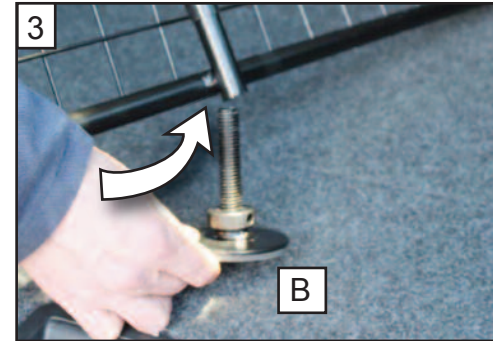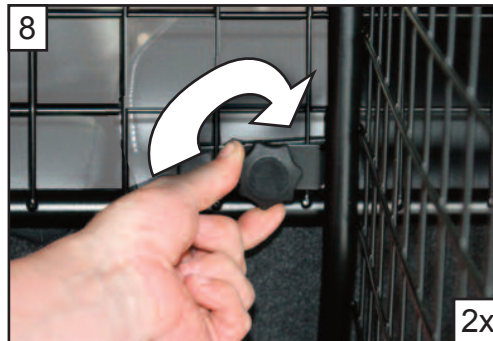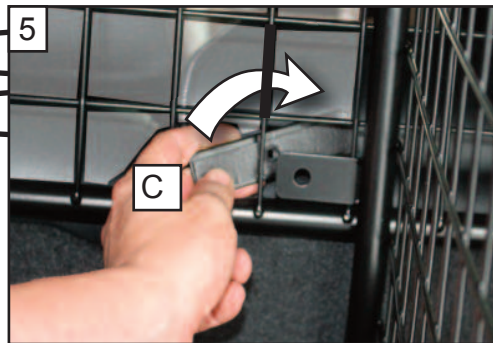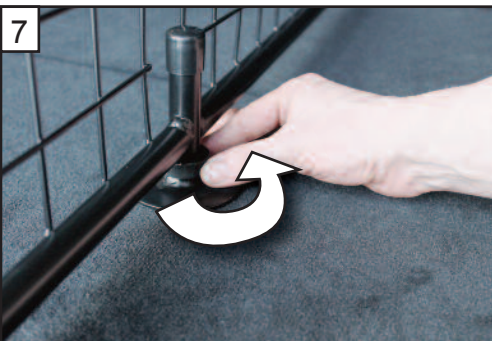

subject to alteration without notice