

KIT



Bx1 L/H



A



Bx1 R/H



C x4



D x2 @462mm



E x2



F x1



**Volkswagen Touran
2015 onwards
G1438**

**DOG GUARD
FITTING INSTRUCTION**

**HUNDESCHUTZGITTER
EINBAUANLEITUNG**

**PROTECTION CONTRE LES CHIENS
INSTRUCTIONS DE MONTAGE**

**HUNDEGITTER
MONTERINGSVEJLEDNING**

**CONJUNTO PROTECTOR PARA PERROS
INSTRUCCIONES DE MONTAJE**

**KIT BARRIERA CANI
ISTRUZIONI DI MONTAGGIO**




**HUNDEVERNGITTER
MONTASJEVEILEDNING**




**HONDENBESCHERMINGSREK
INBOUWINSTRUKTIES**

**SATS HUNDSKYDD
MONTERINGSANVISNING**





**KOIRAN TURVARISTIKKO
ASENNUSOHJEET**

www.guardsmandogguards.co.uk

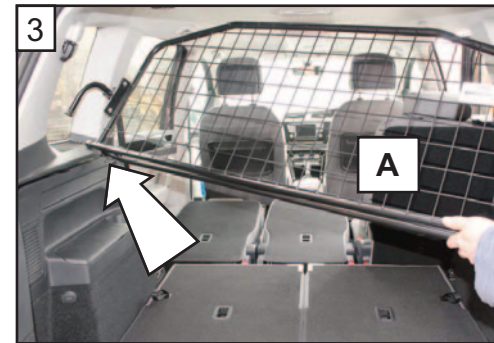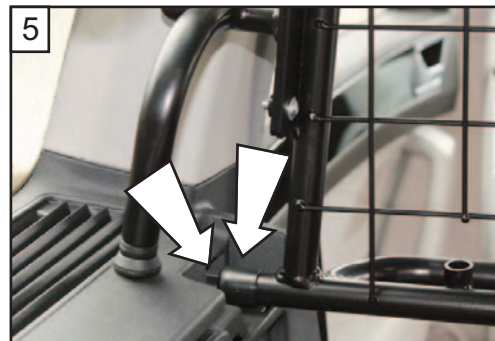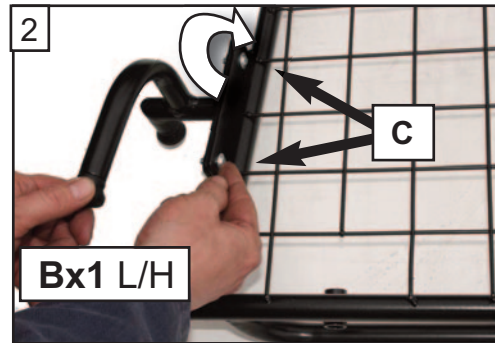


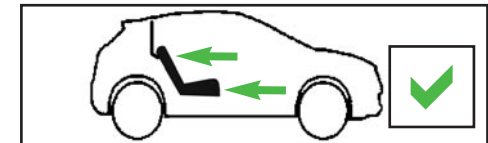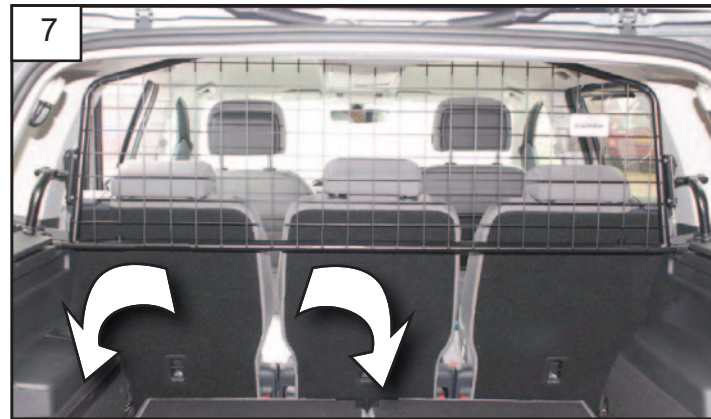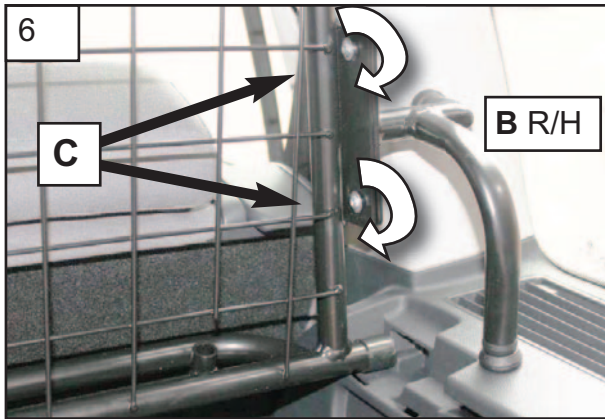

! Erforderliche Sitzposition
Position de siège requise
Posición de asiento requerida

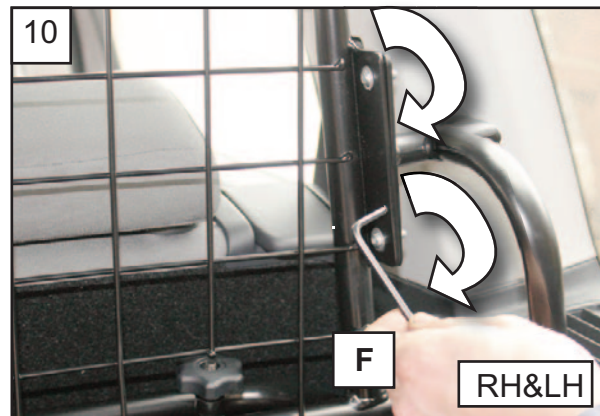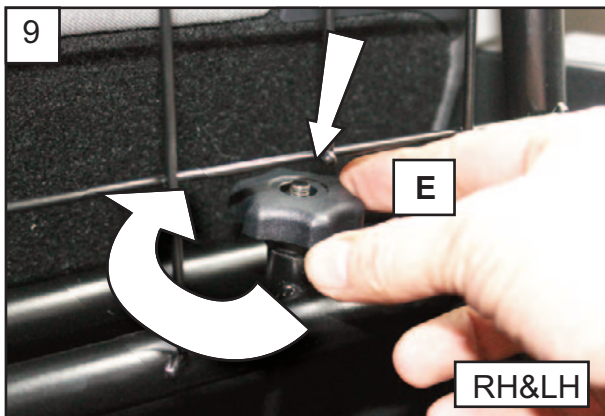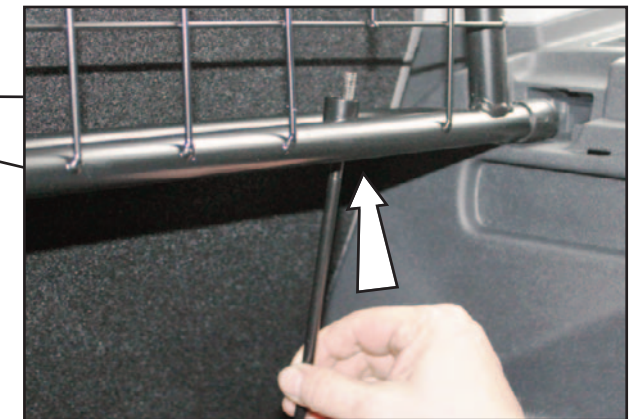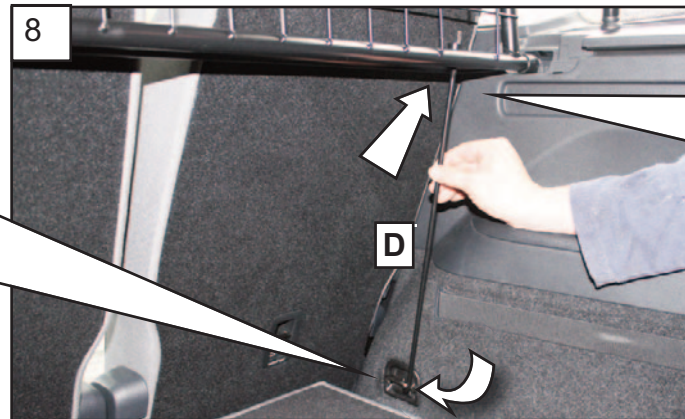

KIT

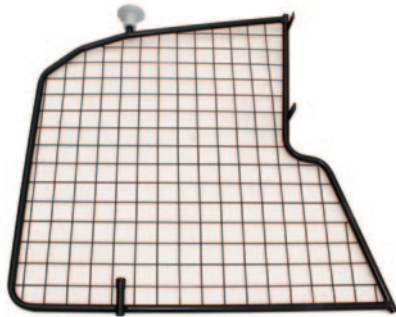

A



B



C x2








D x2



Volkswagen Touran
2015 onwards
G1438D

BOOT DIVIDER FITTING INSTRUCTION

CAN ONLY BE USED IN
CONJUNCTION WITH
GUARDSMAN
Volkswagen Touran
Dog Guard
PART No.G1438

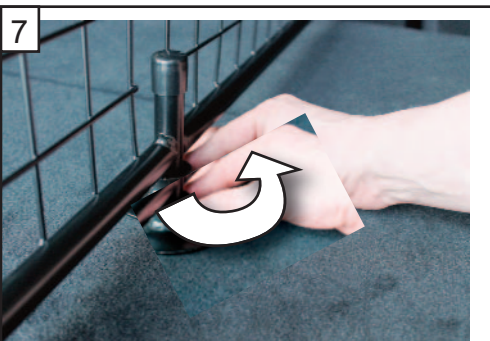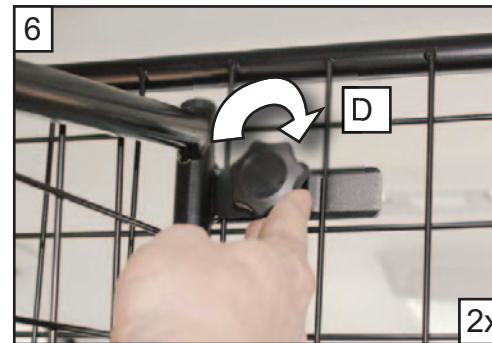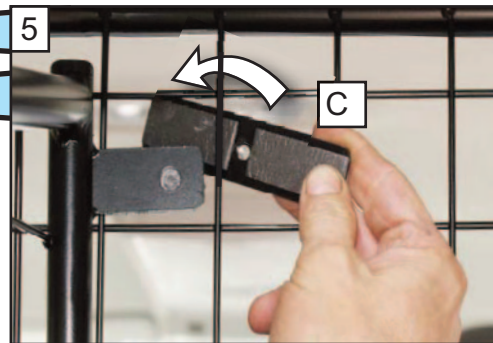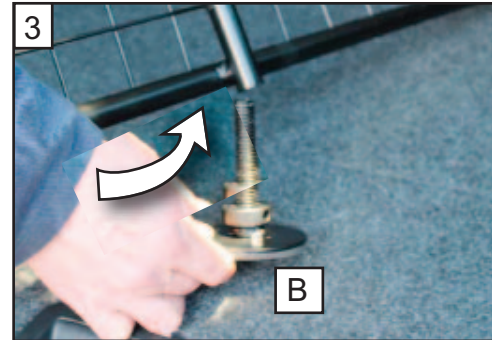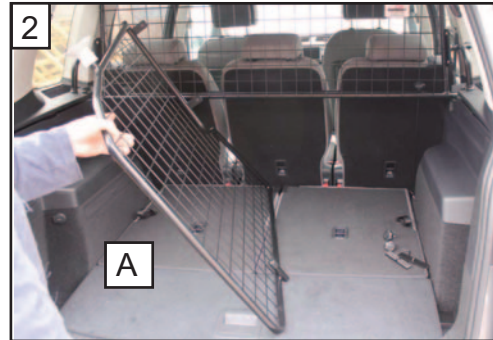

www.guardsmandogguards.co.uk

subject to alteration without notice