
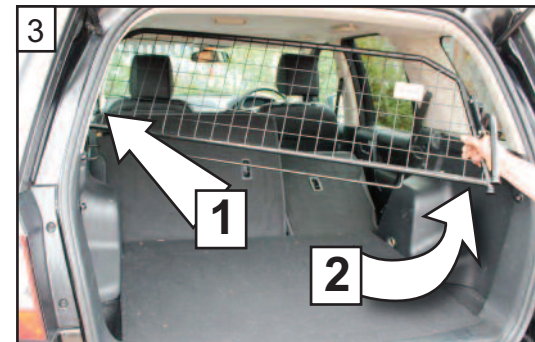
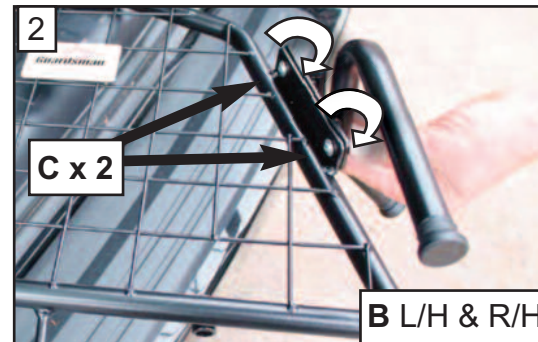


KIT

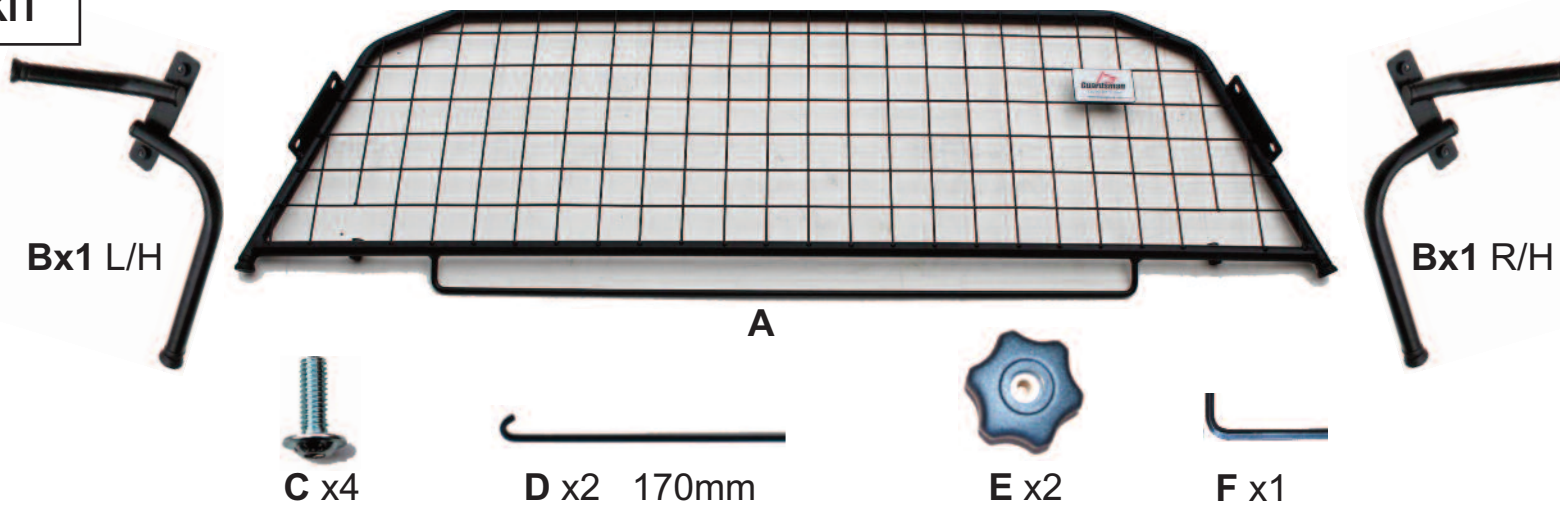

**Land Rover Freelander 2
(2006 to 2014)**

G1472

**DOG GUARD
FITTING INSTRUCTION**

**HUNDESCHUTZGITTER
EINBAUANLEITUNG**

**PROTECTION CONTRE LES
CHIENS
INSTRUCTIONS DE MONTAGE**

**HUNDEGITTER
MONTERINGSVEJLEDNING**

**CONJUNTO PROTECTOR
PARA PERROS
INSTRUCCIONES DE MONTAJE**

**KIT BARRIERA CANI
ISTRUZIONI DI MONTAGGIO**

**HUNDEVERNGITTER
MONTASJEVEILEDNING**





**HONDENBESCHERMINGSREK
INBOUWINSTRUKTIES**

**SATS HUNDSKYDD
MONTERINGSANVISNING**

**KOIRAN TURVARISTIKKO
ASENNUSOHJEET**

1 / 2

www.dogcages.uk.com
www.guardsmandogguards.co.uk
sales@athag.co.uk

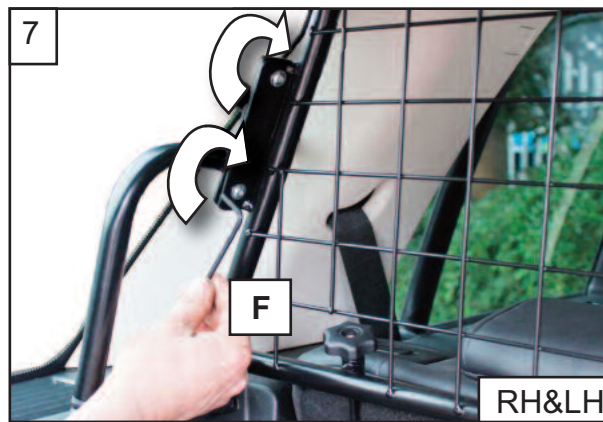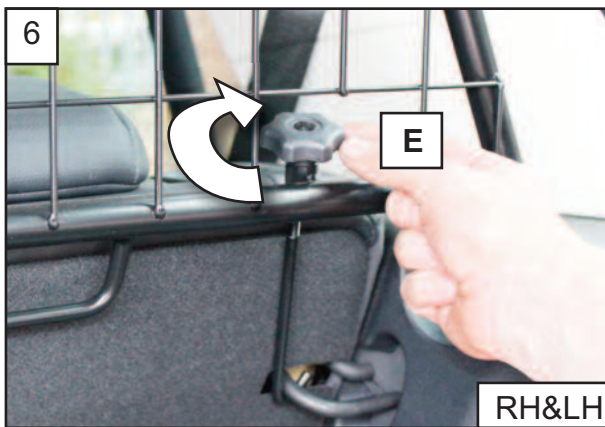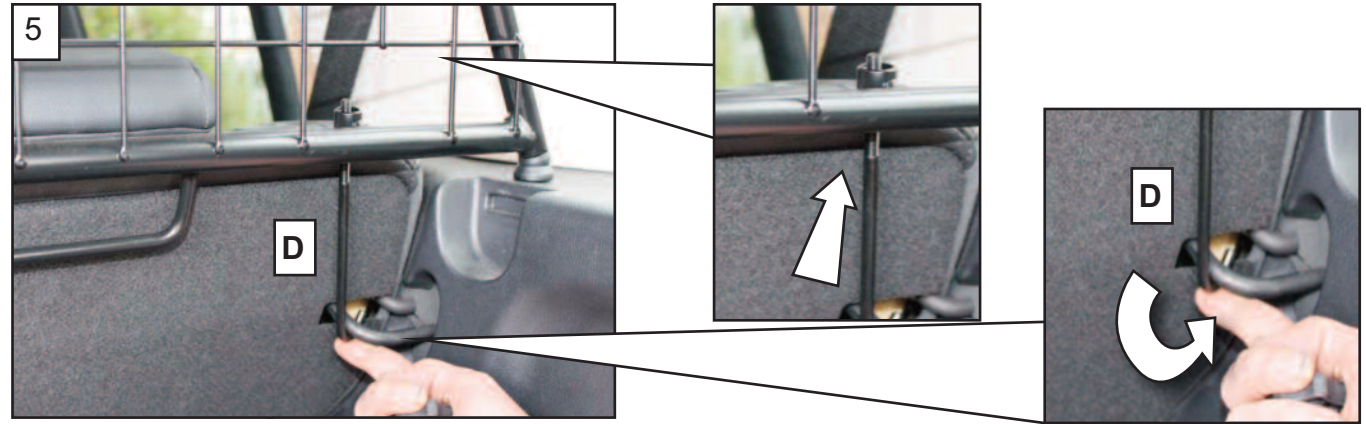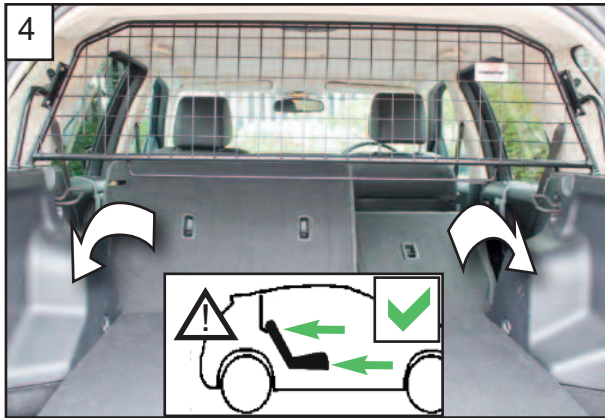

KIT



A



B x1



C x2



D x2



Land Rover Freelander
2006-2014

Variable Boot Divider
G1472D

BOOT DIVIDER
FITTING INSTRUCTION

CAN ONLY BE USED WITH
GUARDSMAN
Jaguar F Pace

Dog Guard - G1466

+44 (0)1827 713040
www.dogcages.uk.com
www.guardsmandogguards.co.uk

subject to alteration without notice

G1466D v1 - 10/17

