



**VW T-ROC
(2018~Onwards)
Part No.G1649**

**DOG GUARD
FITTING INSTRUCTION**

**HUNDESCHUTZGITTER
EINBAUANLEITUNG**

**PROTECTION CONTRE LES CHIENS
INSTRUCTIONS DE MONTAGE**

**HUNDEGITTER
MONTERINGSVEJLEDNING**

**CONJUNTO PROTECTOR
PARA PERROS
INSTRUCCIONES DE MONTAJE**

**KIT BARRIERA CANI
ISTRUZIONI DI MONTAGGIO**

**HUNDEVERNGITTER
MONTASJEVEILEDNING**

**HONDENBESCHERMINGSREK
INBOUWINSTRUKTIES**


**SATS HUNDSKYDD
MONTERINGSANVISNING**

**KOIRAN TURVARISTIKKO
ASENNUSOHJEET**



www.guardsmandogguards.co.uk


subject to alteration without notice
G1649 v1. 4/23

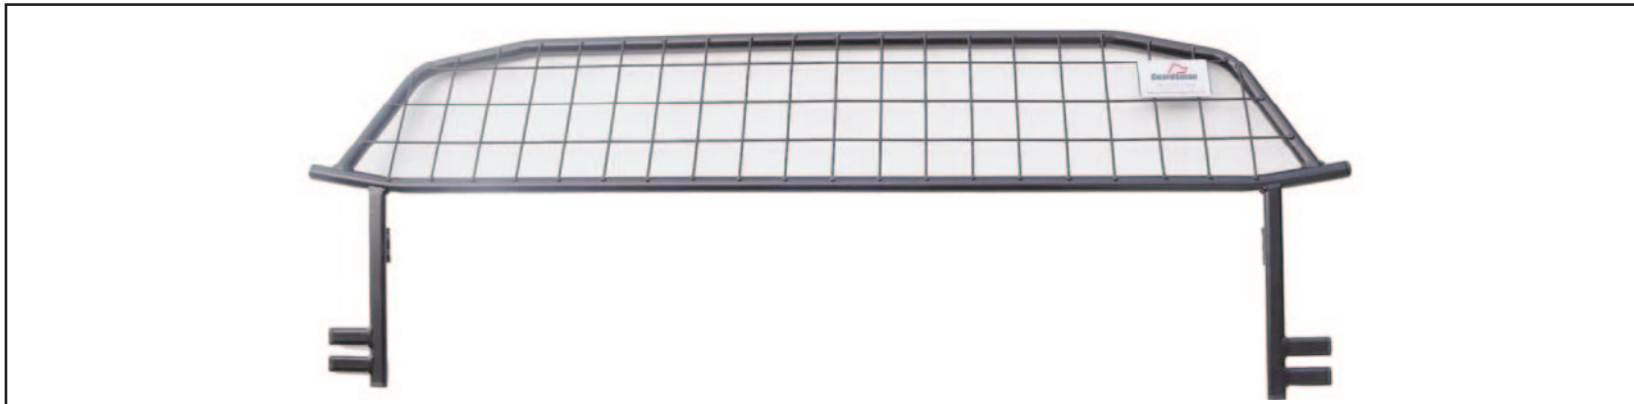


**READ FULLY BEFORE BEGINNING - IT'LL MAKE MORE SENSE!
VOR DEM ANFANG VOLLSTÄNDIG LESEN - ES WIRD MEHR SINN MACHEN!**



Drop rear seats / Rücksitze fallen lassen

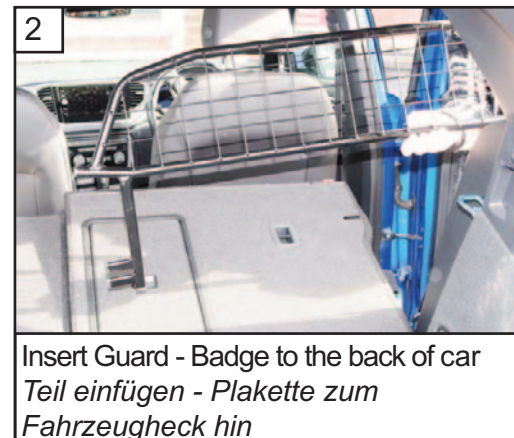

Insert Guard - Badge to the back of car
Teil einfügen - Plakette zum
Fahrzeugeck hin

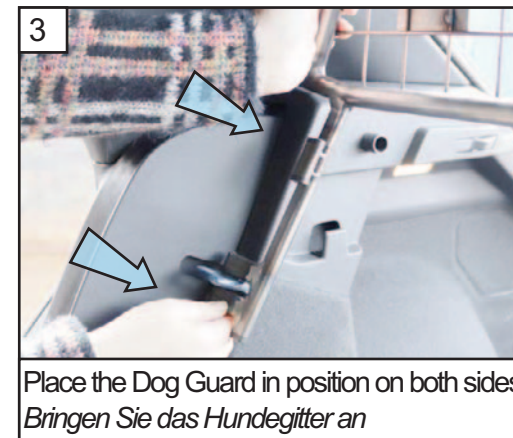

Place the Dog Guard in position on both sides
Bringen Sie das Hundegitter an



Check Guard is centred. **Firmly** Close Seats back.
Stellen Sie sicher, dass Gitter zentriert ist. Sitze schließen

