



KIT

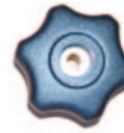

C x2

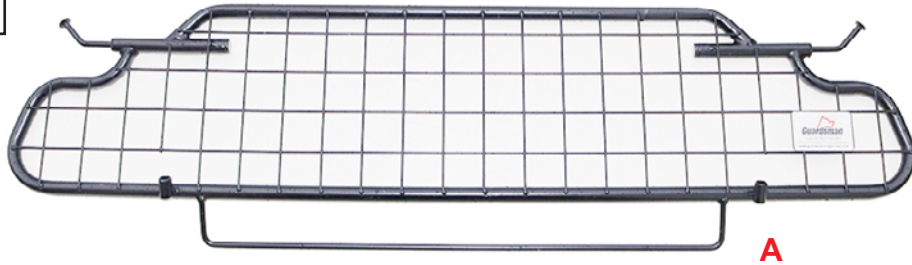


B x2
@300mm





!LEAVE ALL FIXINGS LOOSE IF ALSO FITTING BOOT DIVIDER!



**AUDI Q8 e-tron
(2023 onwards) G1579-1
Audi e-Tron
(2019 onwards) G1579**

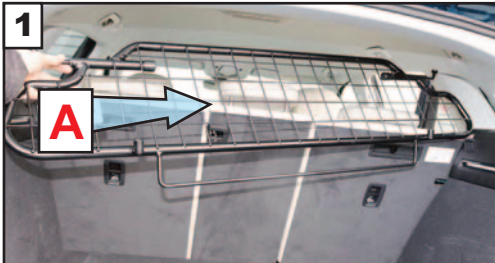

1
Mesh to Back of Car - Seats Down
Grill auf der Rückseite des Autos

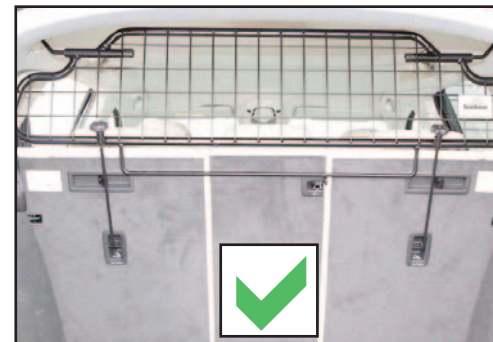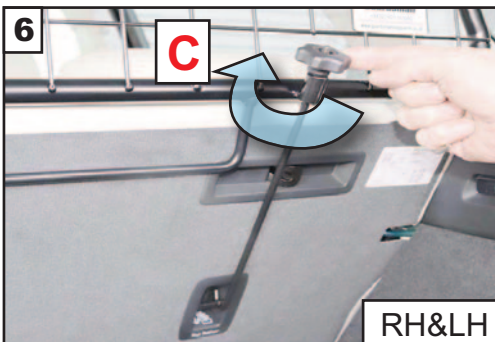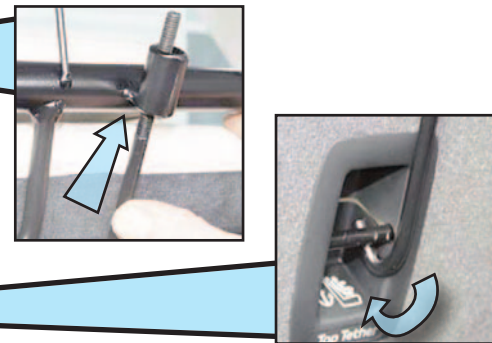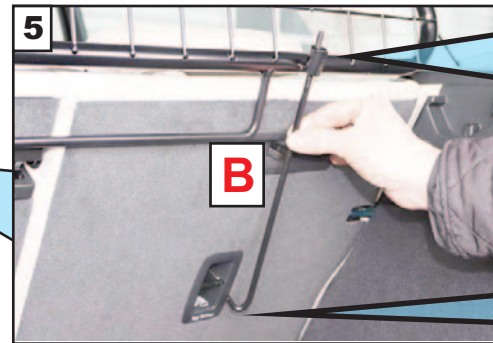

To fit the luggage blind:

1. Loosen parts 'B' and 'C'.
2. Drop rear seat backs
3. Fit blind
4. Close seat backs
5. Re-fit parts 'B' and 'C'

**DOG GUARD
FITTING INSTRUCTION**

**HUNDESCHUTZGITTER
EINBAUANLEITUNG**

**HONDENBESCHERMINGSREK
INBOUWINSTRUKTIES**

**SATS HUNDSKYDD
MONTERINGSANVISNING**

**KOIRAN TURVARISTIKKO
ASENNUSOHJE**

**PROTECTION CONTRE LES CHIENS
INSTRUCTIONS DE MONTAGE**

**HUNDEGITTER
MONTERINGSVEJLEDNING**

**CONJUNTO PROTECTOR
PARA PERROS
INSTRUCCIONES DE MONTAJE**

**KIT BARRIERA CANI
ISTRUZIONI DI MONTAGGIO**

**HUNDEVERNGITTER
MONTASJEVEILEDNING**

www.guardsmantogguards.co.uk



G1579 v.1 2/20 G1579-1 v.1 9/23