





KIT

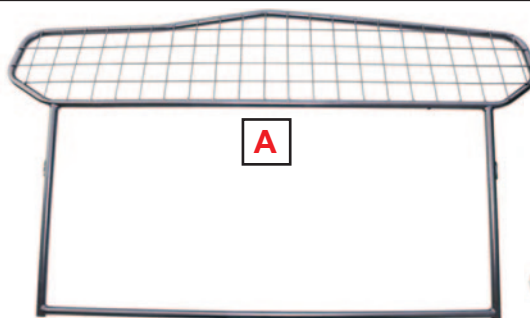

A




B x 2

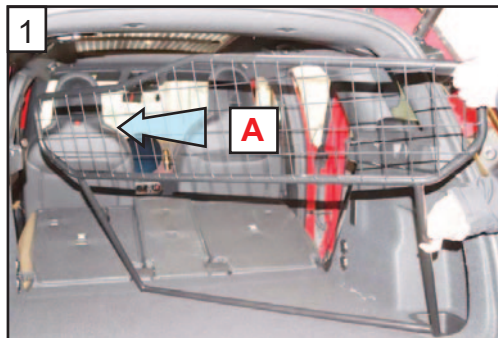

1

Fully drop the rear seats.

Insert the Dog Guard with the mesh to the rear of the car.

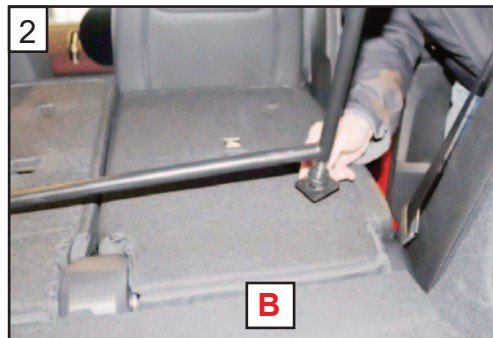


2

Put the Dog Guard in its approximate position and insert the adjustable feet into the lower vertical tubes.



3

Slide the Dog Guard back with the adjustable feet inserted. Rotate as required.

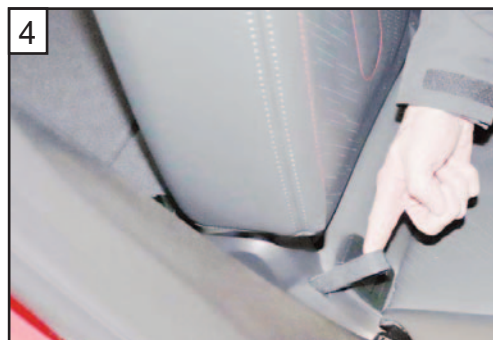

4

Return the seat backs to their fully reclined position.



5

Pivot the Dog Guard so the hooks in the lower legs catch under the Bar in the back of the rear seat.



6

Push the Hook Bracket under the Bar on both sides.



7

Push the adjustable feet against the back of the rear seat. Adjust them upwards until they are secure.

Refit the load cover if required.



TO BE RETAINED BY THE CUSTOMER FOR FUTURE REFERENCE



Frequently check the tension of the adjustable feet to ensure correct fitment.

ATHAG LTD. Carlyon Road Ind Est.
Atherstone Warwickshire
United Kingdom. CV9 1HU
info@athag.co.uk